



Pictorial guide for Shower Room S-3838 Front frame installation

This is a picture guide to go along with the video instruction

In this presentation
you will learn how
to install the S-3838
Front Frame

- **Components Page 3-7**
- **Stile and Panel Characters Pages 8-13**
- **Stile and Panel Installation Page 14-21**
- **Door Clip Installation Page 22-23**
- **2nd Track to Panel Installation Page 24-34**
- **Assembled Front Frame Page 35**

Please call 317-802-9363 (Toll-free 1-877-358-7458 if you have any questions. Thank you for purchasing our product, and good luck!

S-3838 Components

1. Left and right side front panels with stiles installed

2. Top and bottom tracks

3. Rollers

4. Screws




Panel Clips and 3/8" Screws



Tracks: top and bottom tracks are the same but placed differently

Bottom Track

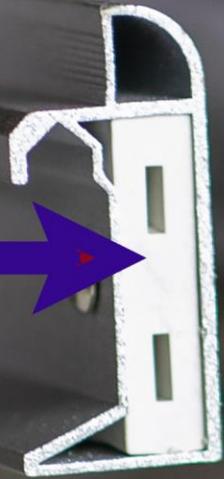

Top Track



Spring loaded bottom roller in bottom track



Top roller with screw in
top track




Screws are
for door height

The Bottom of Right hand Panel when facing the unit



Corner cutout at the bottom of the stile

Top of the right hand panel

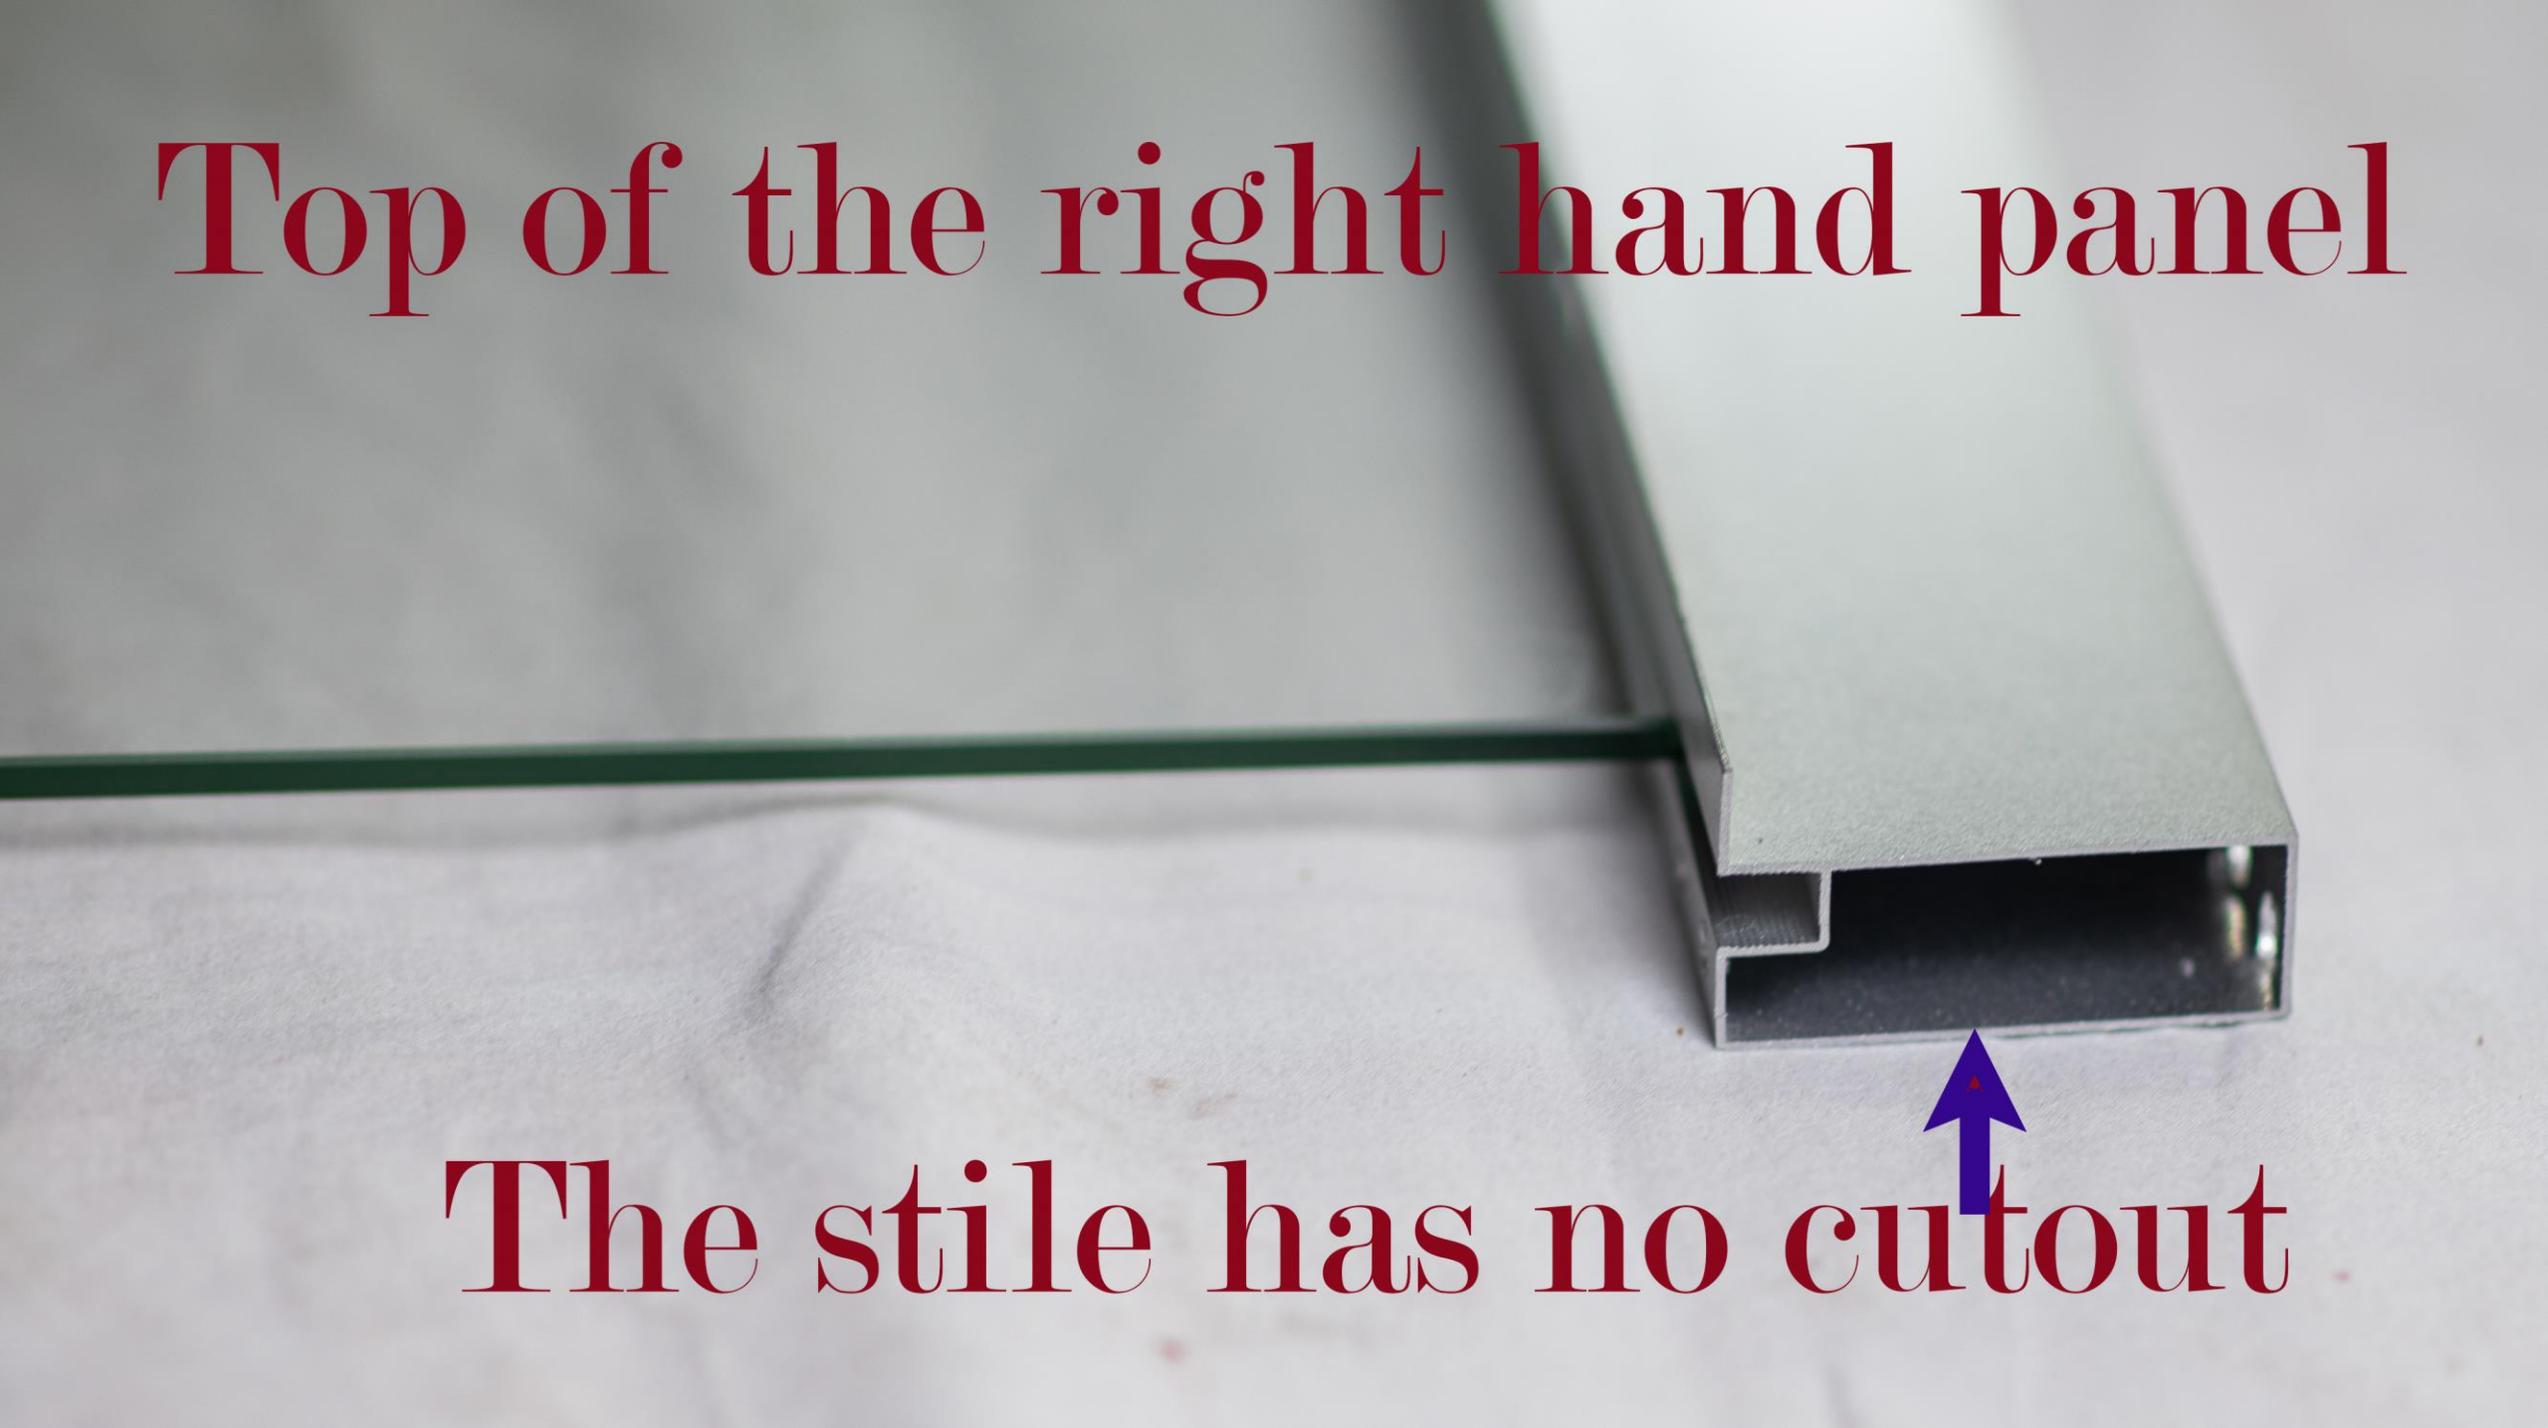


The stile has no cutout

Attach the bottom track to stile

Glass panel
placed on the ledge

Track


Bottom of
stile

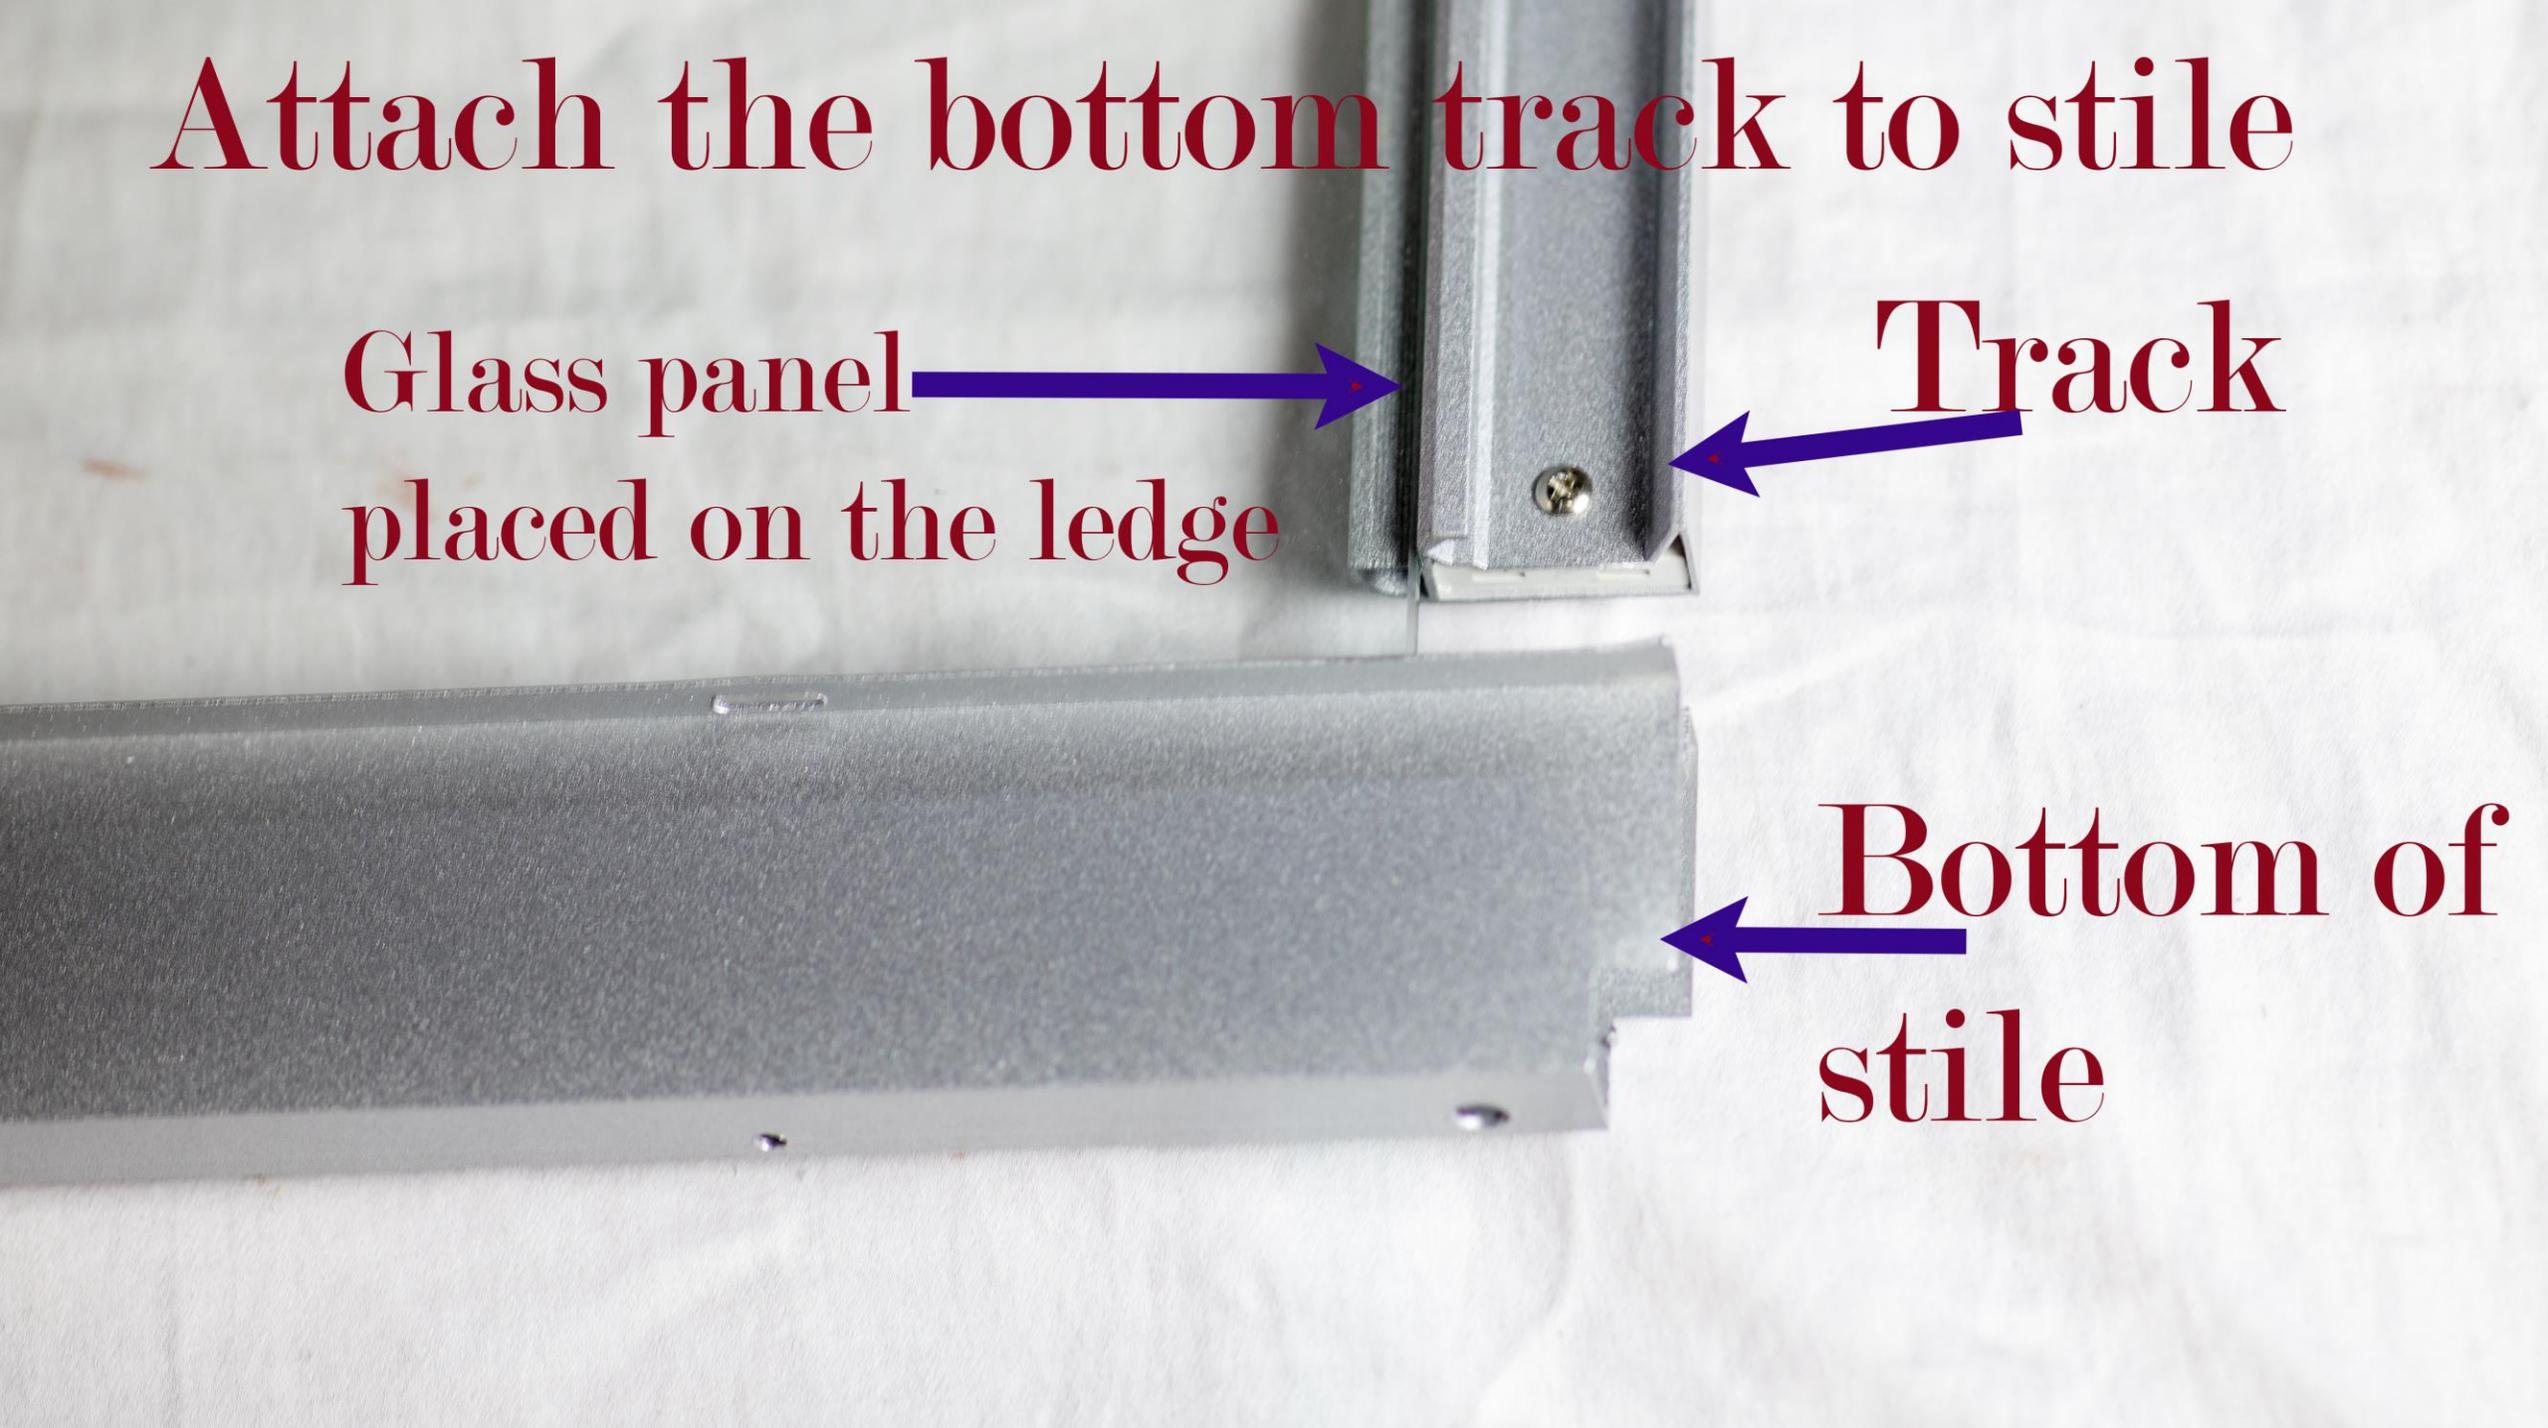


**Make sure that panel is pushed
tightly against the track**



Two screw hole in the track

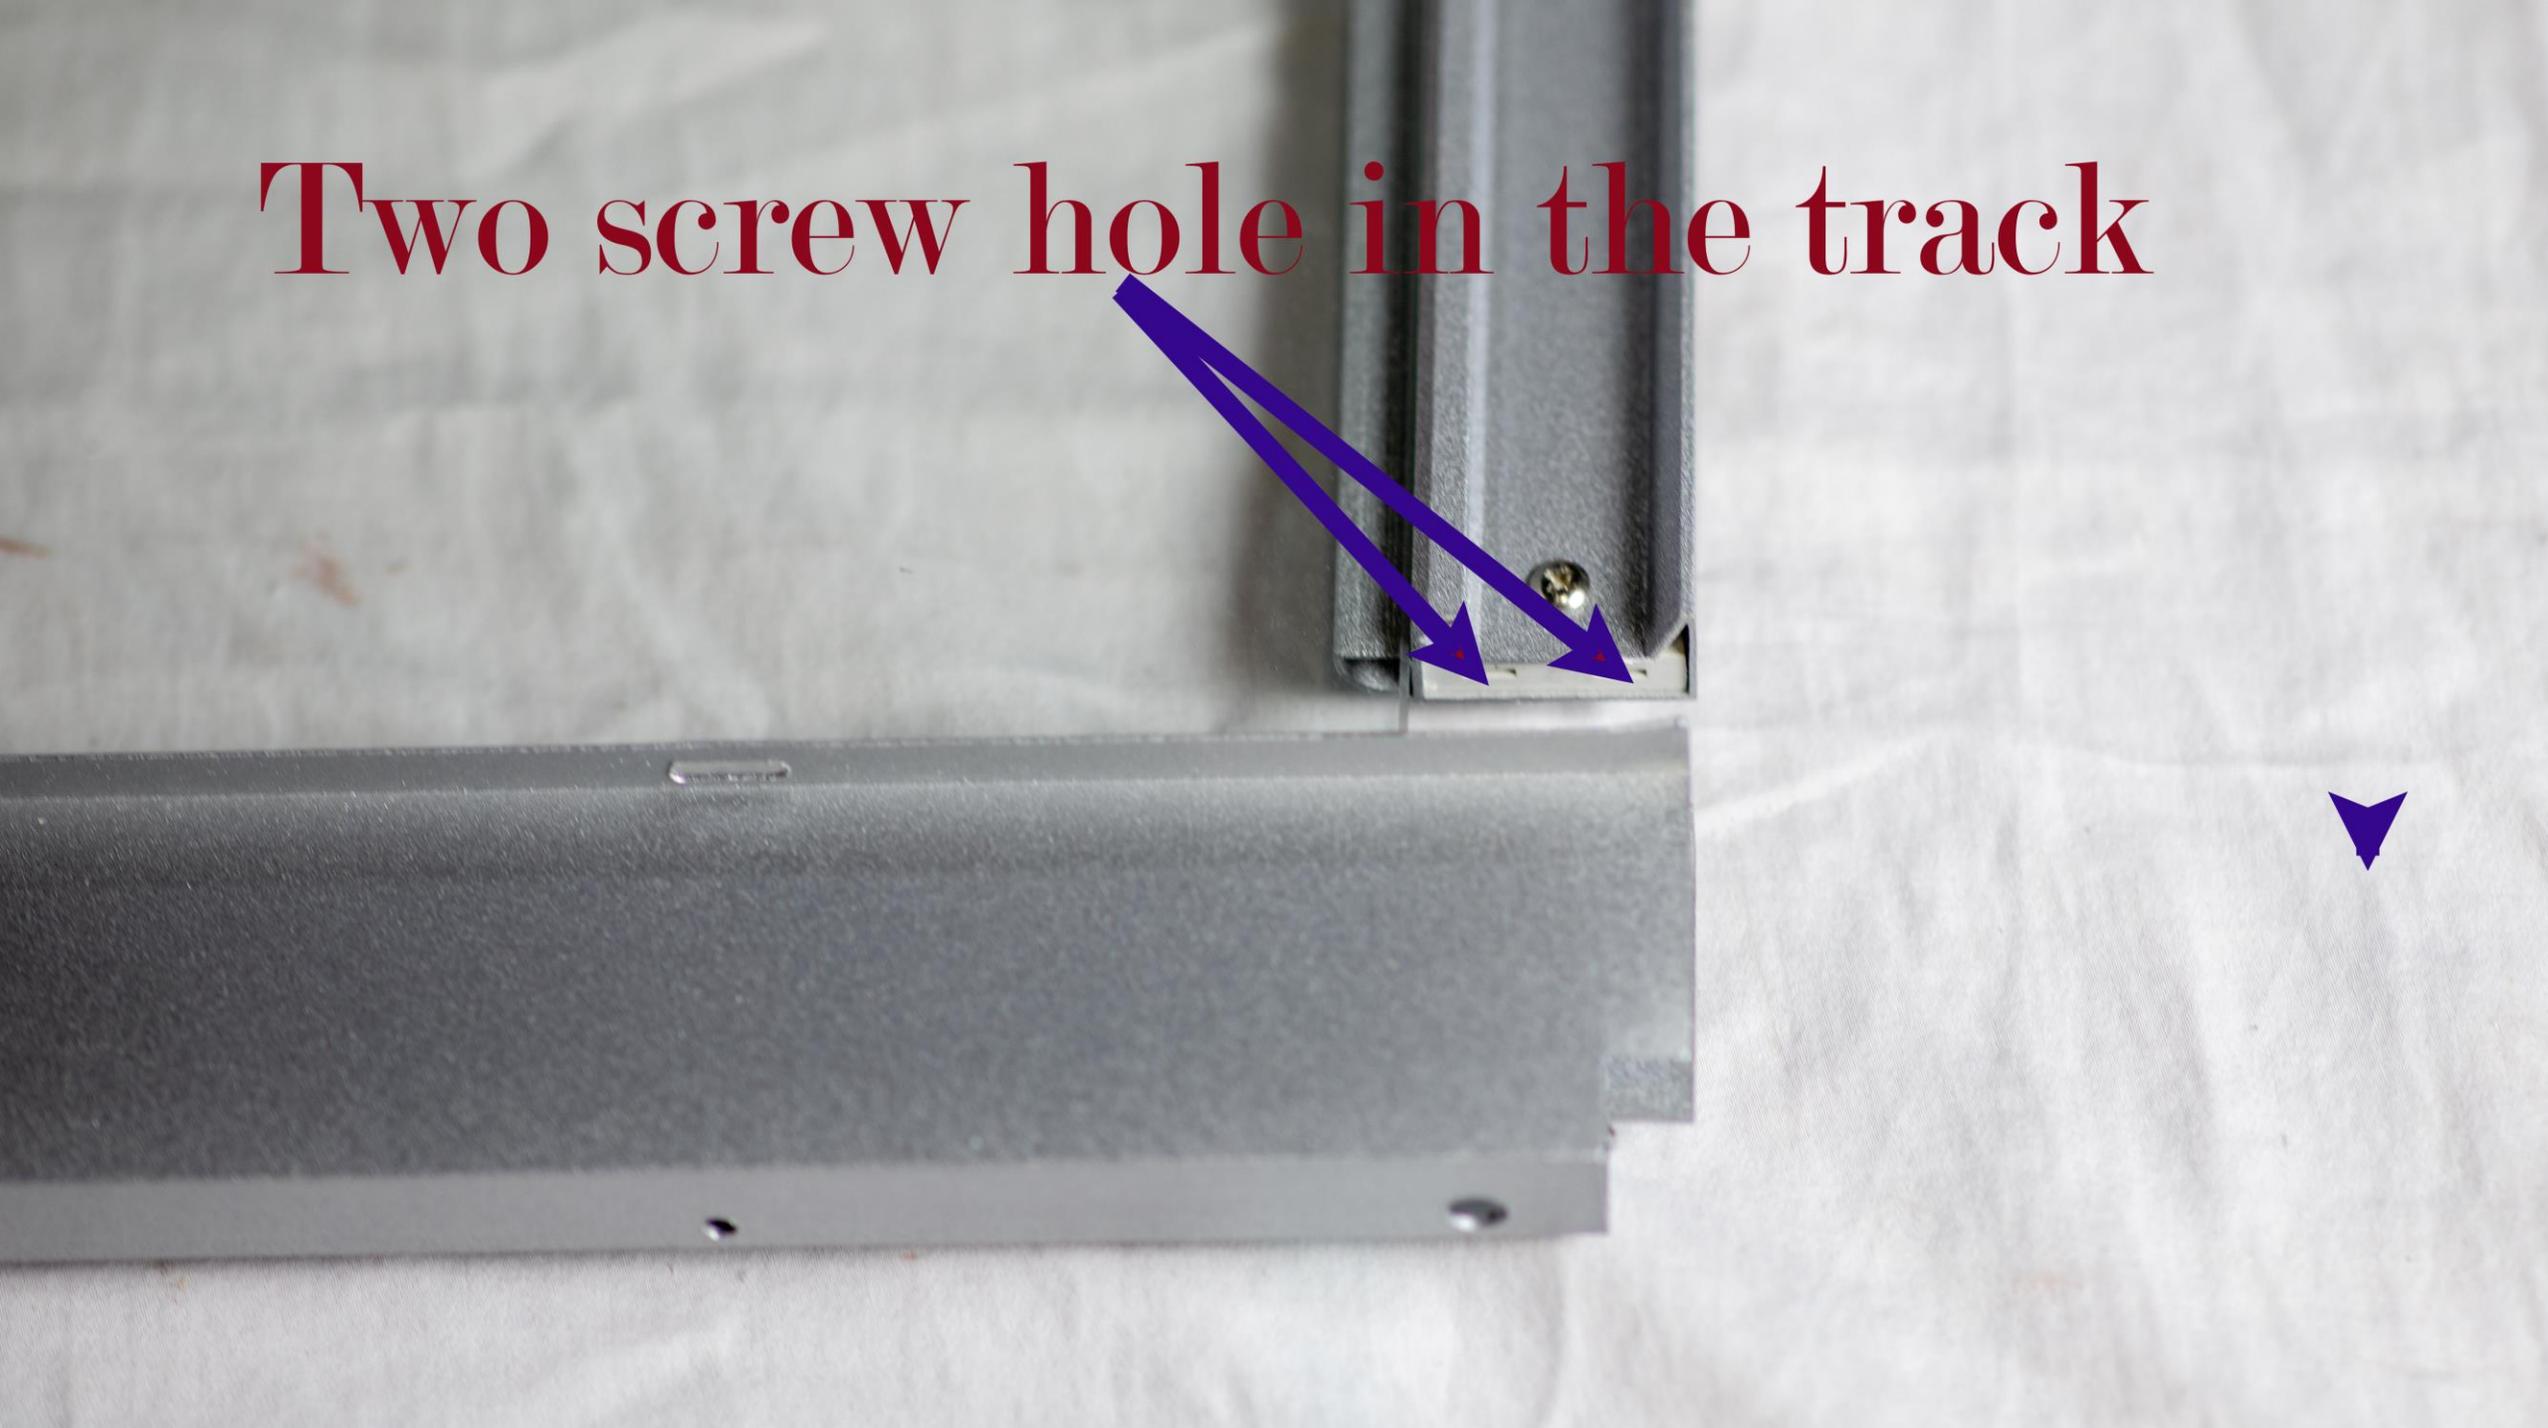

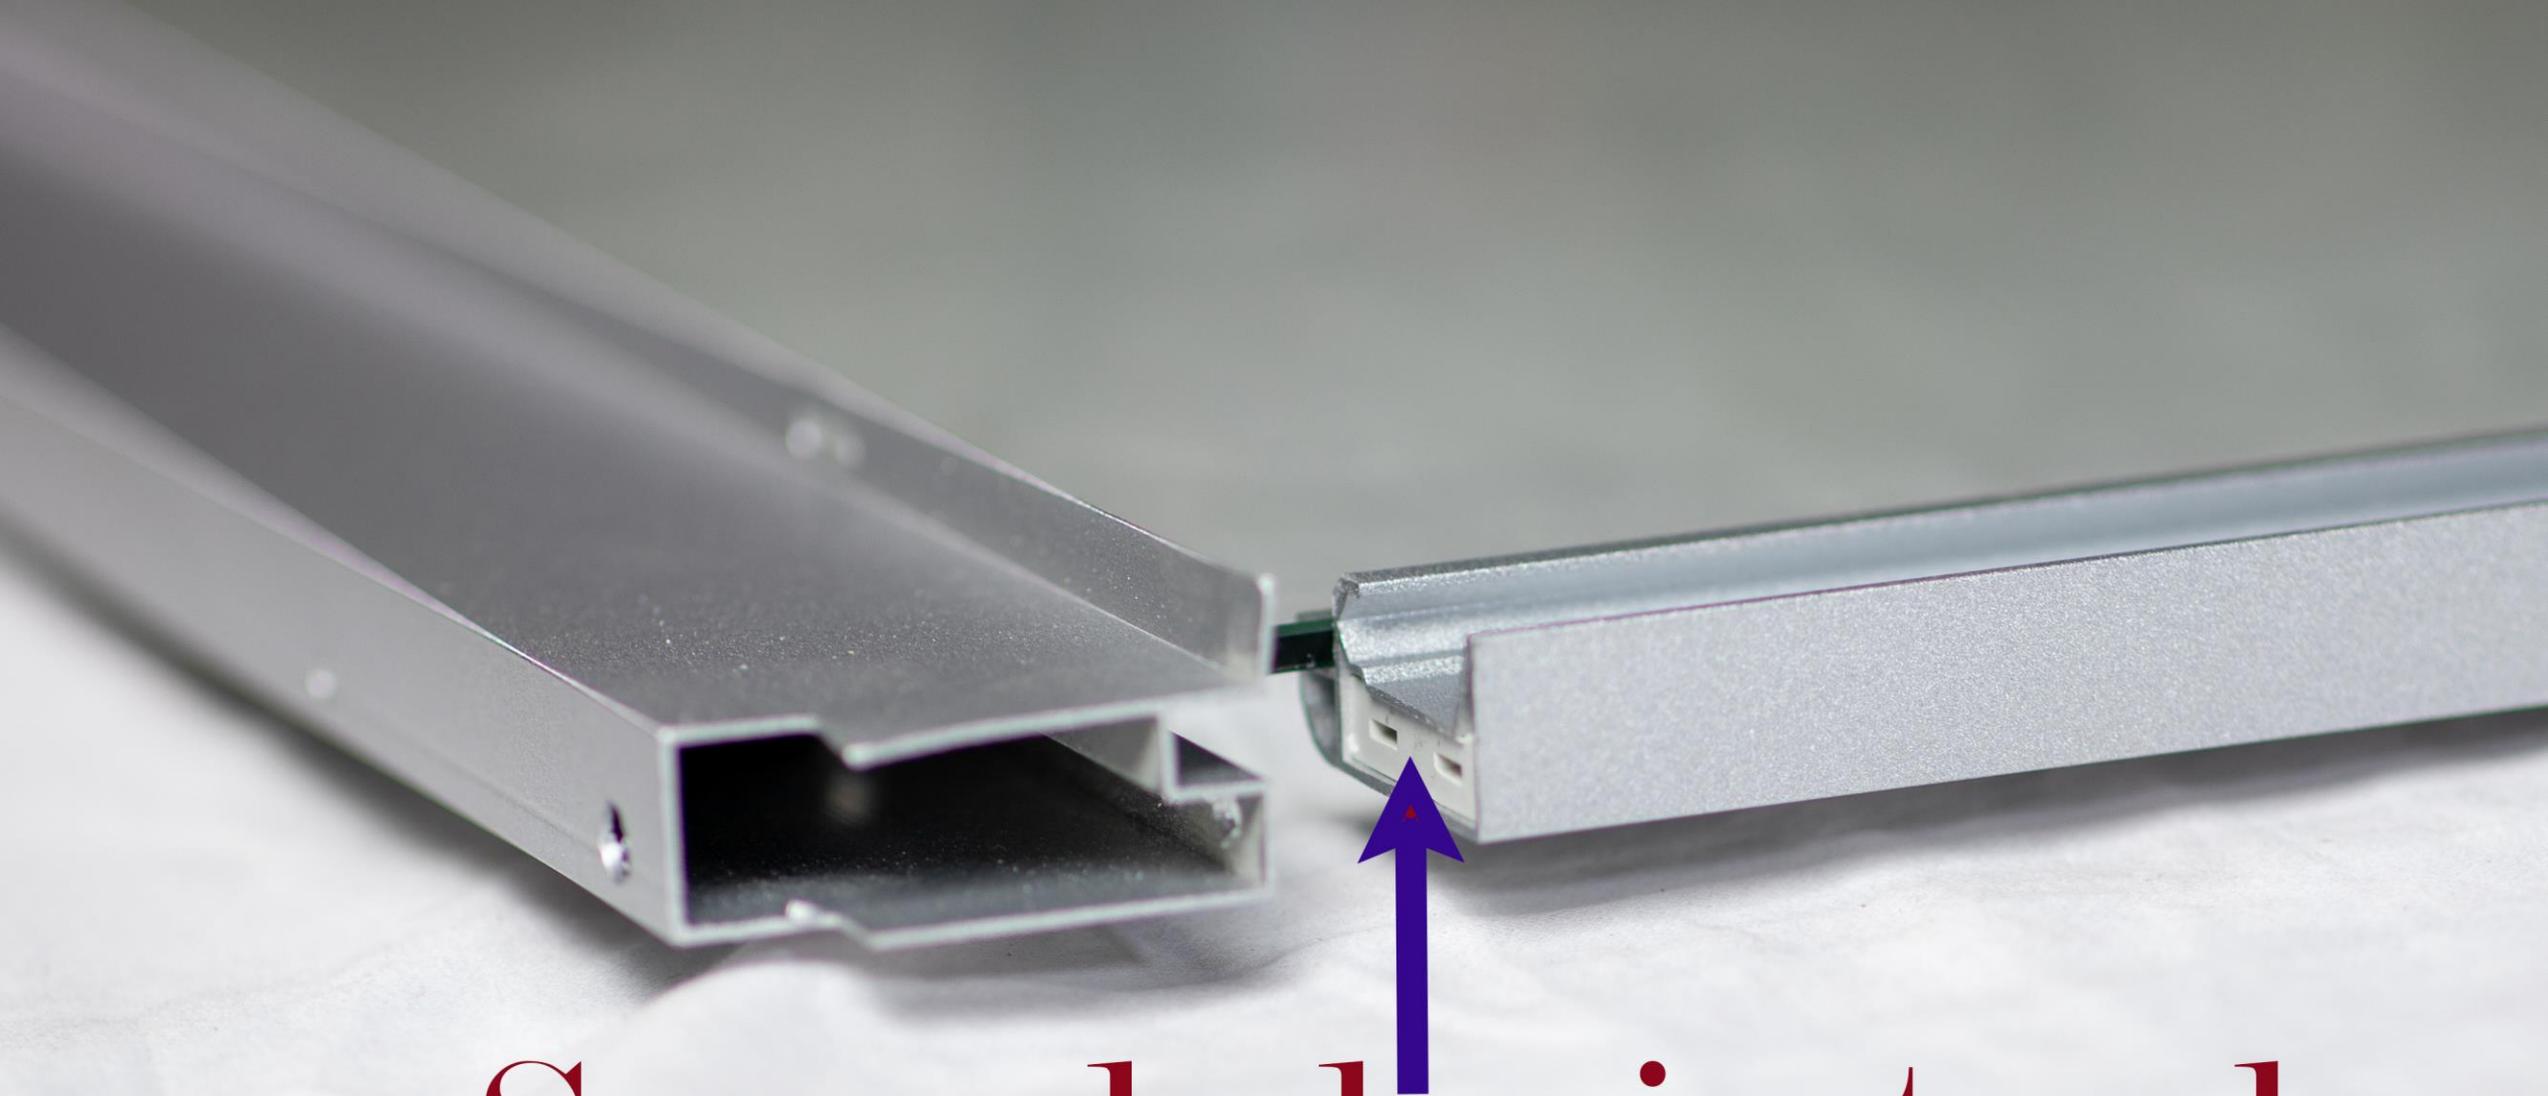


Screw holes in track

Use $7/8$ " screw
going through 1st hole




The body of the screw
going through 2nd hole

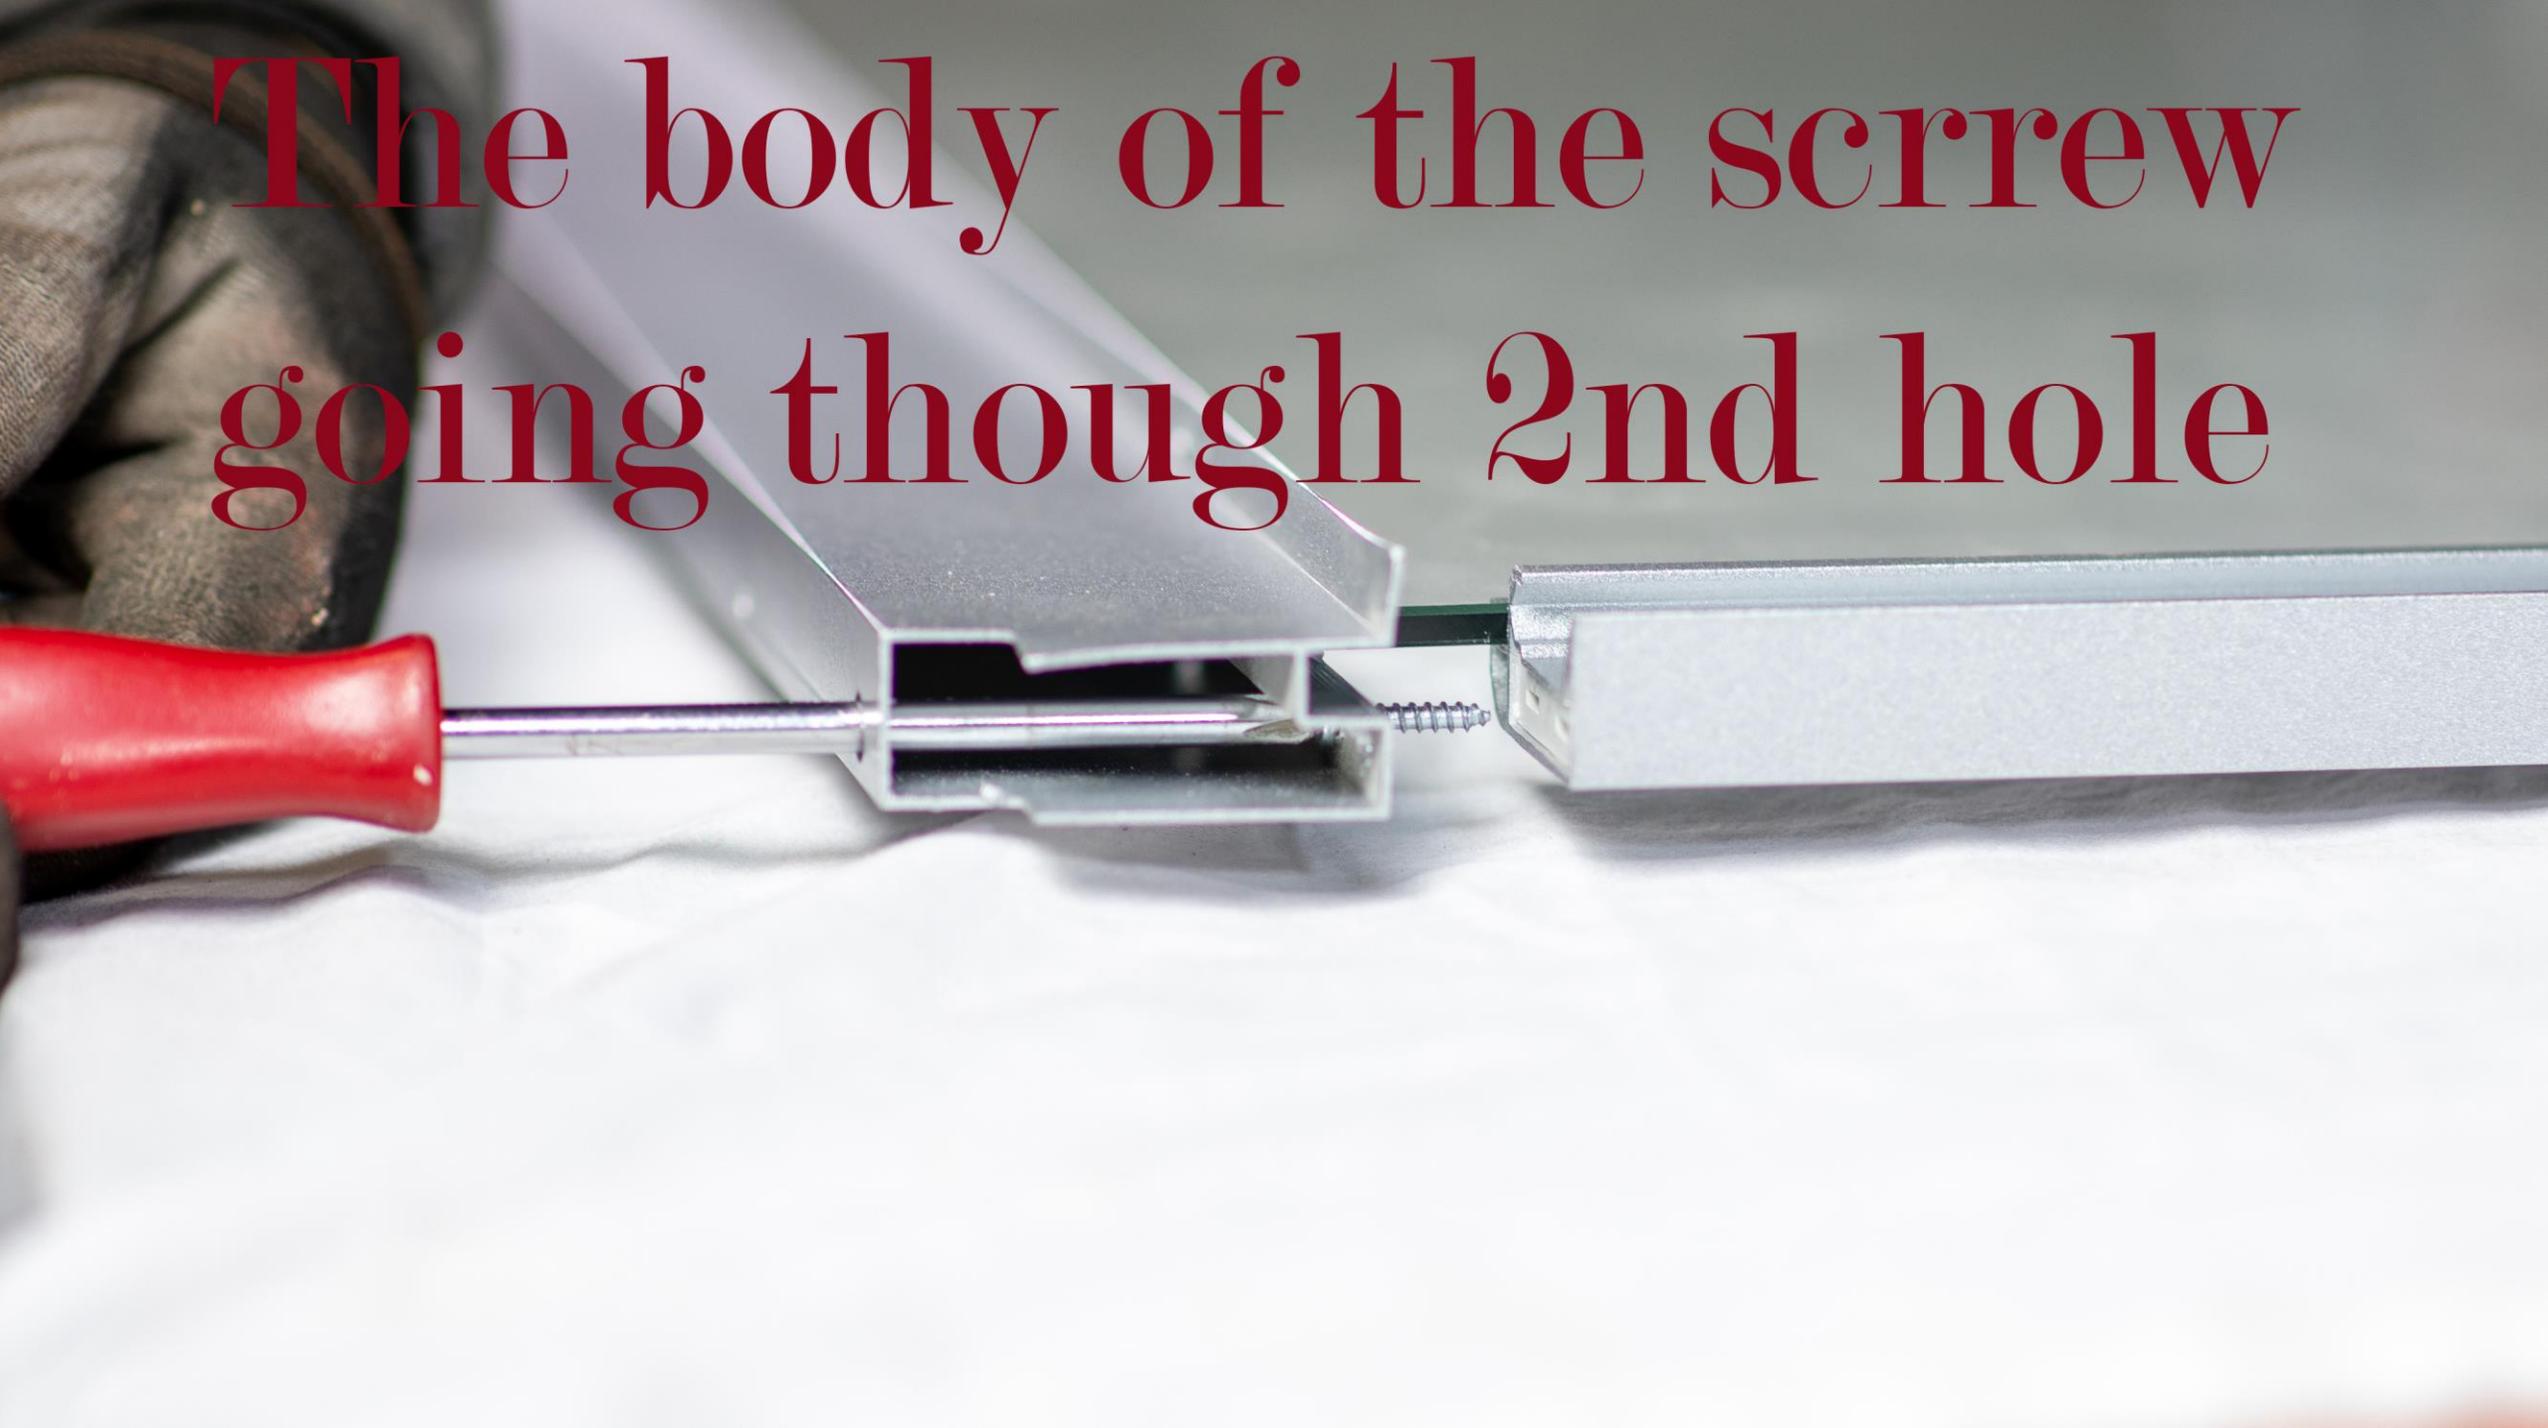



*Screw into the screw hole
in the track*

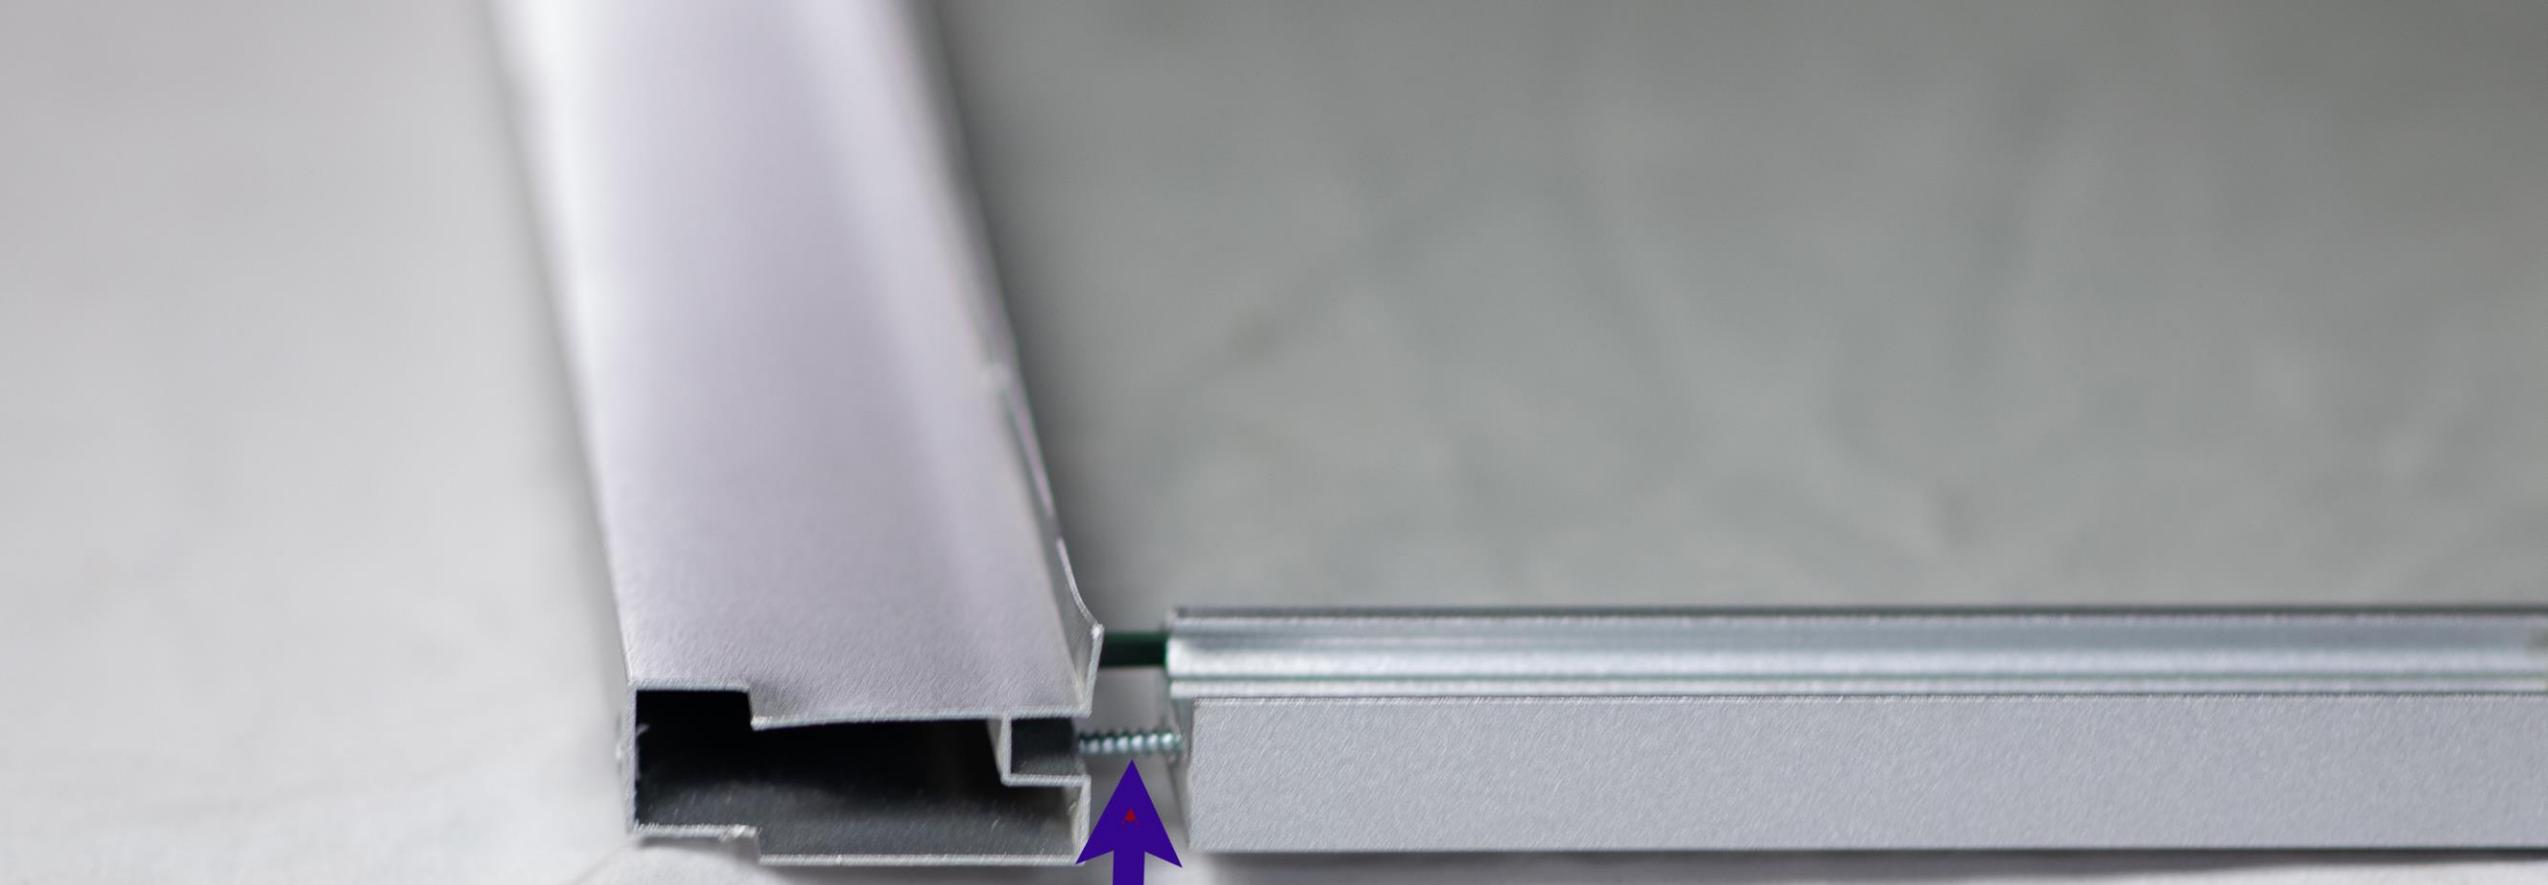A close-up photograph showing a silver metal track with a rectangular cutout. A small green screw is being inserted into the track. A blue arrow points upwards to the screw. The background is a plain, light-colored surface.

*Make a couple of turns
to let screw stay in place*



*Repeat the same
for 2nd screw*


Tighten screws alternatively



A power screw driver
comes in handy




Tighten screws all the way

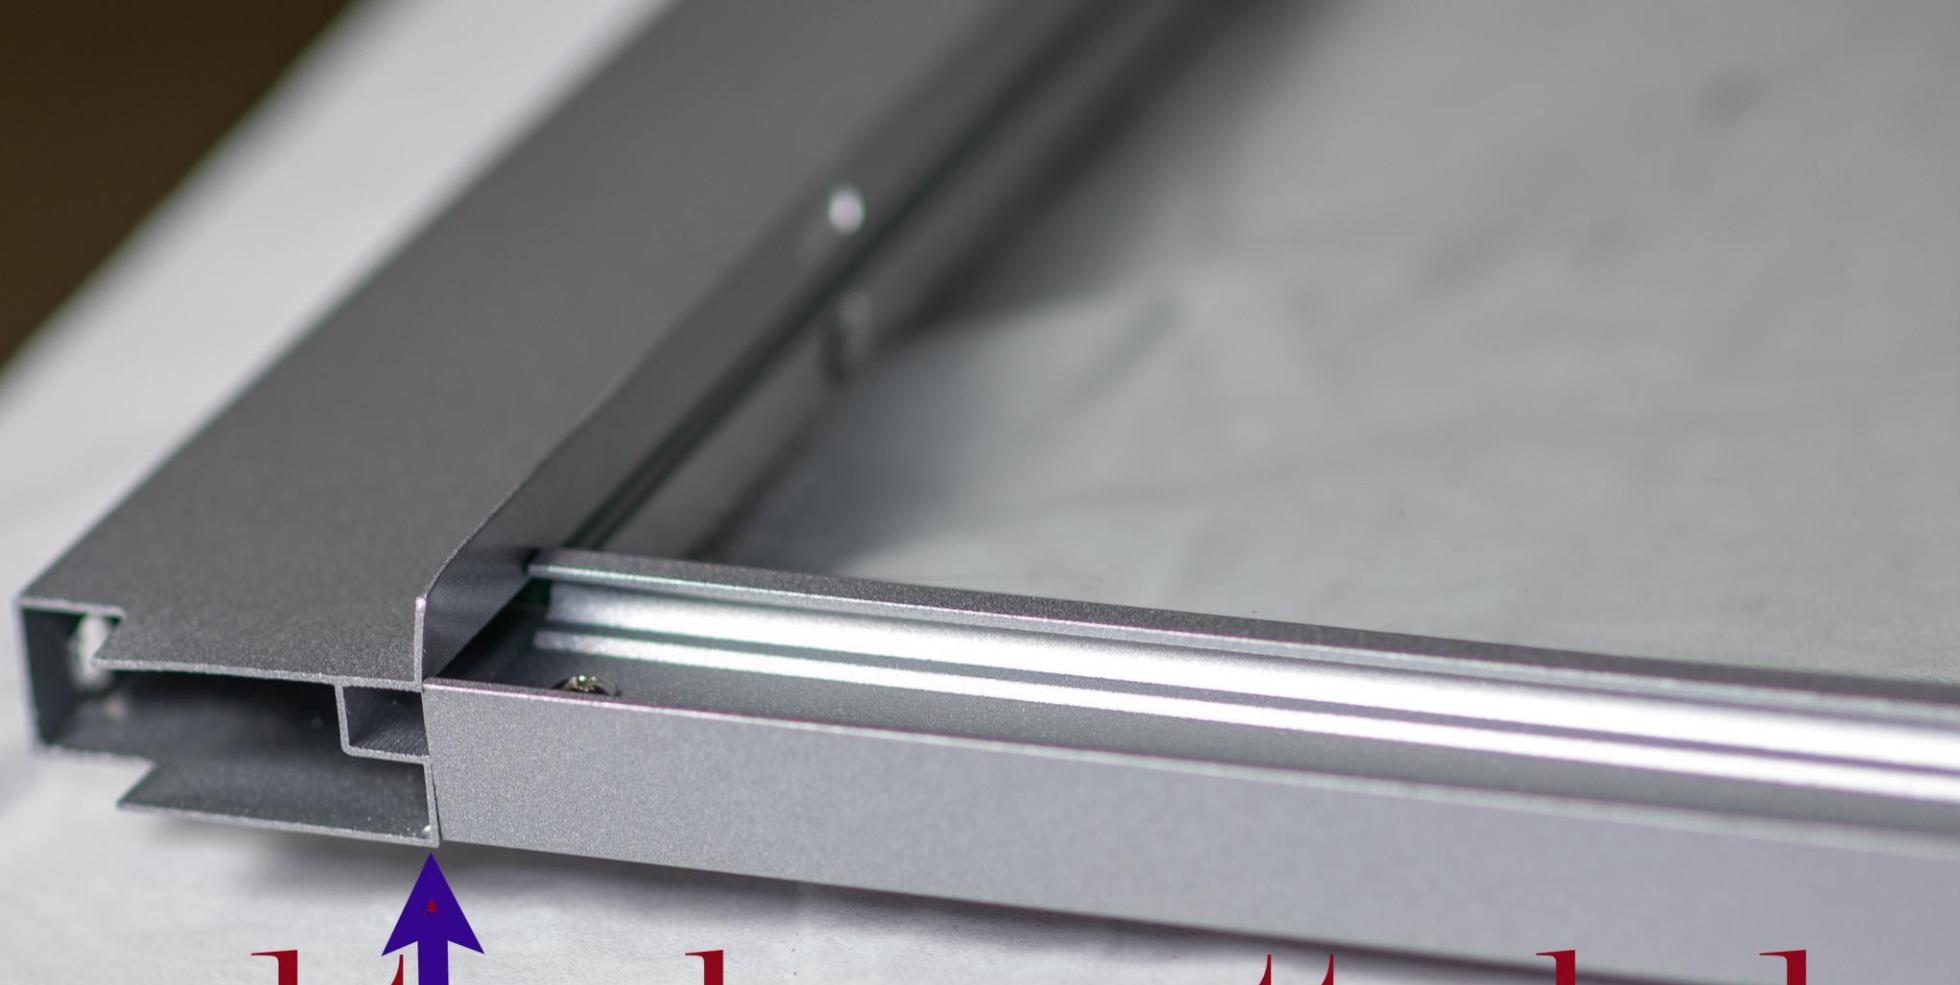


Stile and track are attached
at bottom

Now let's install panel clip

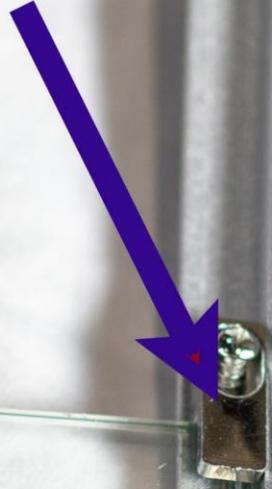

Attach clip to the track
through pre-drilled hole

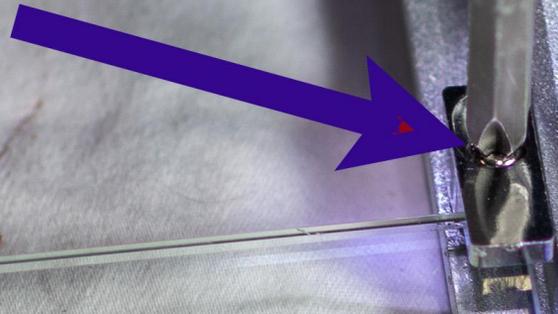

If glass panel is not tightly
pushed against track,




Use a mallet to tap the end of stile


Top track



Stile's top end

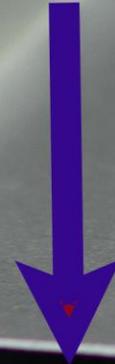


Now let's attach top track to stile

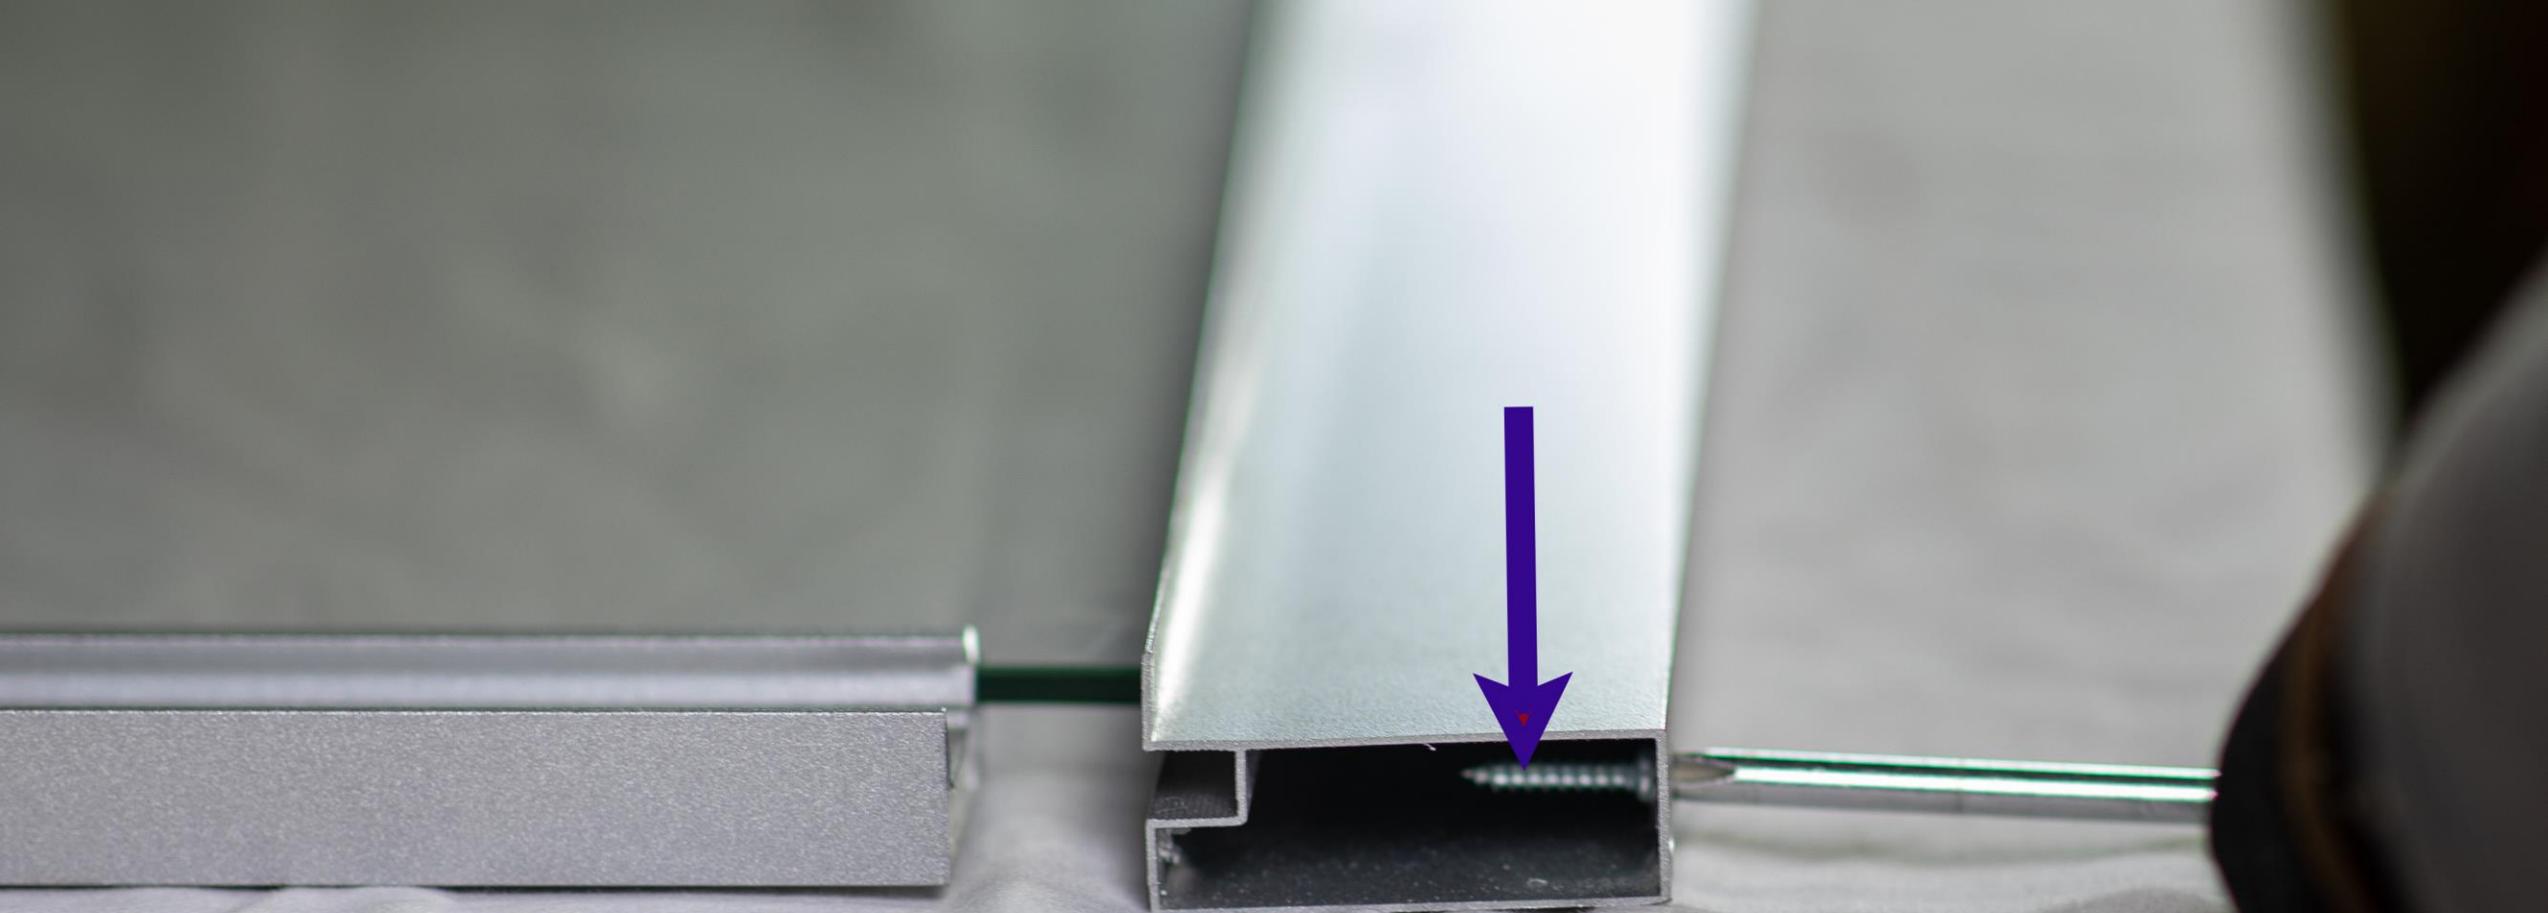


Use 7/8" screw going through
first hole



*Only the body of the screw
going through 2nd hole*

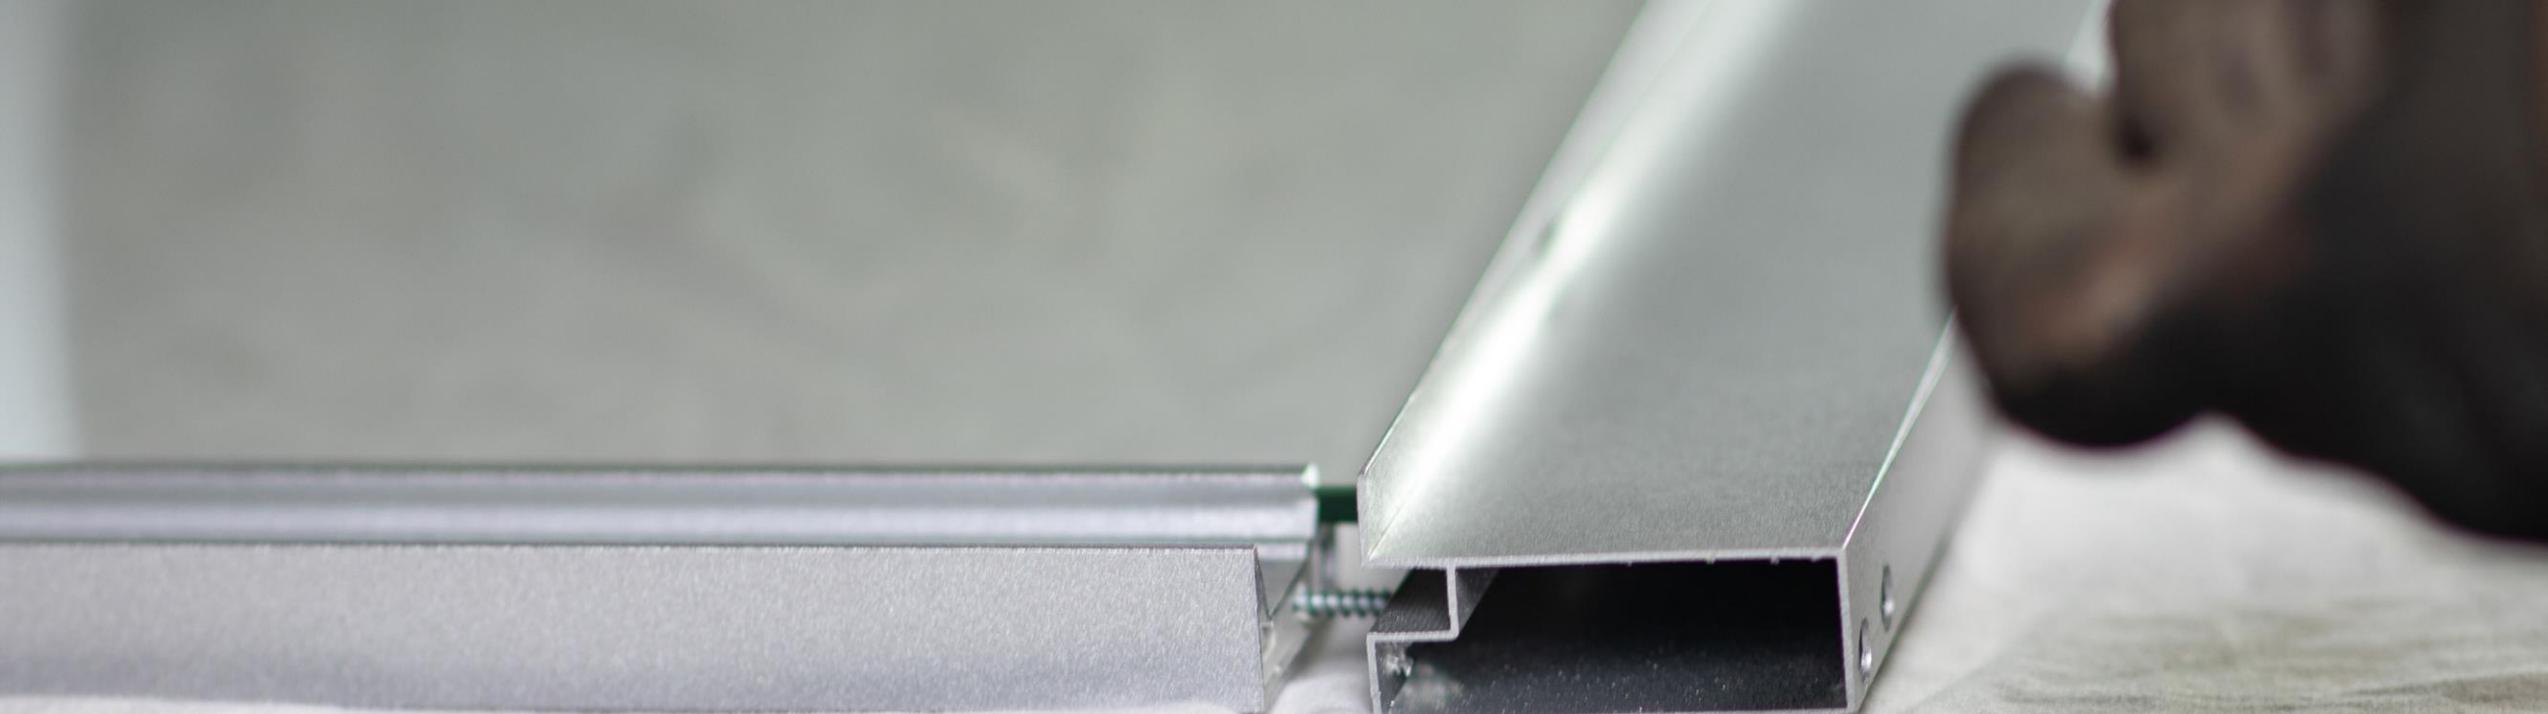

*Make a couple of turns to
secure the screw in place*

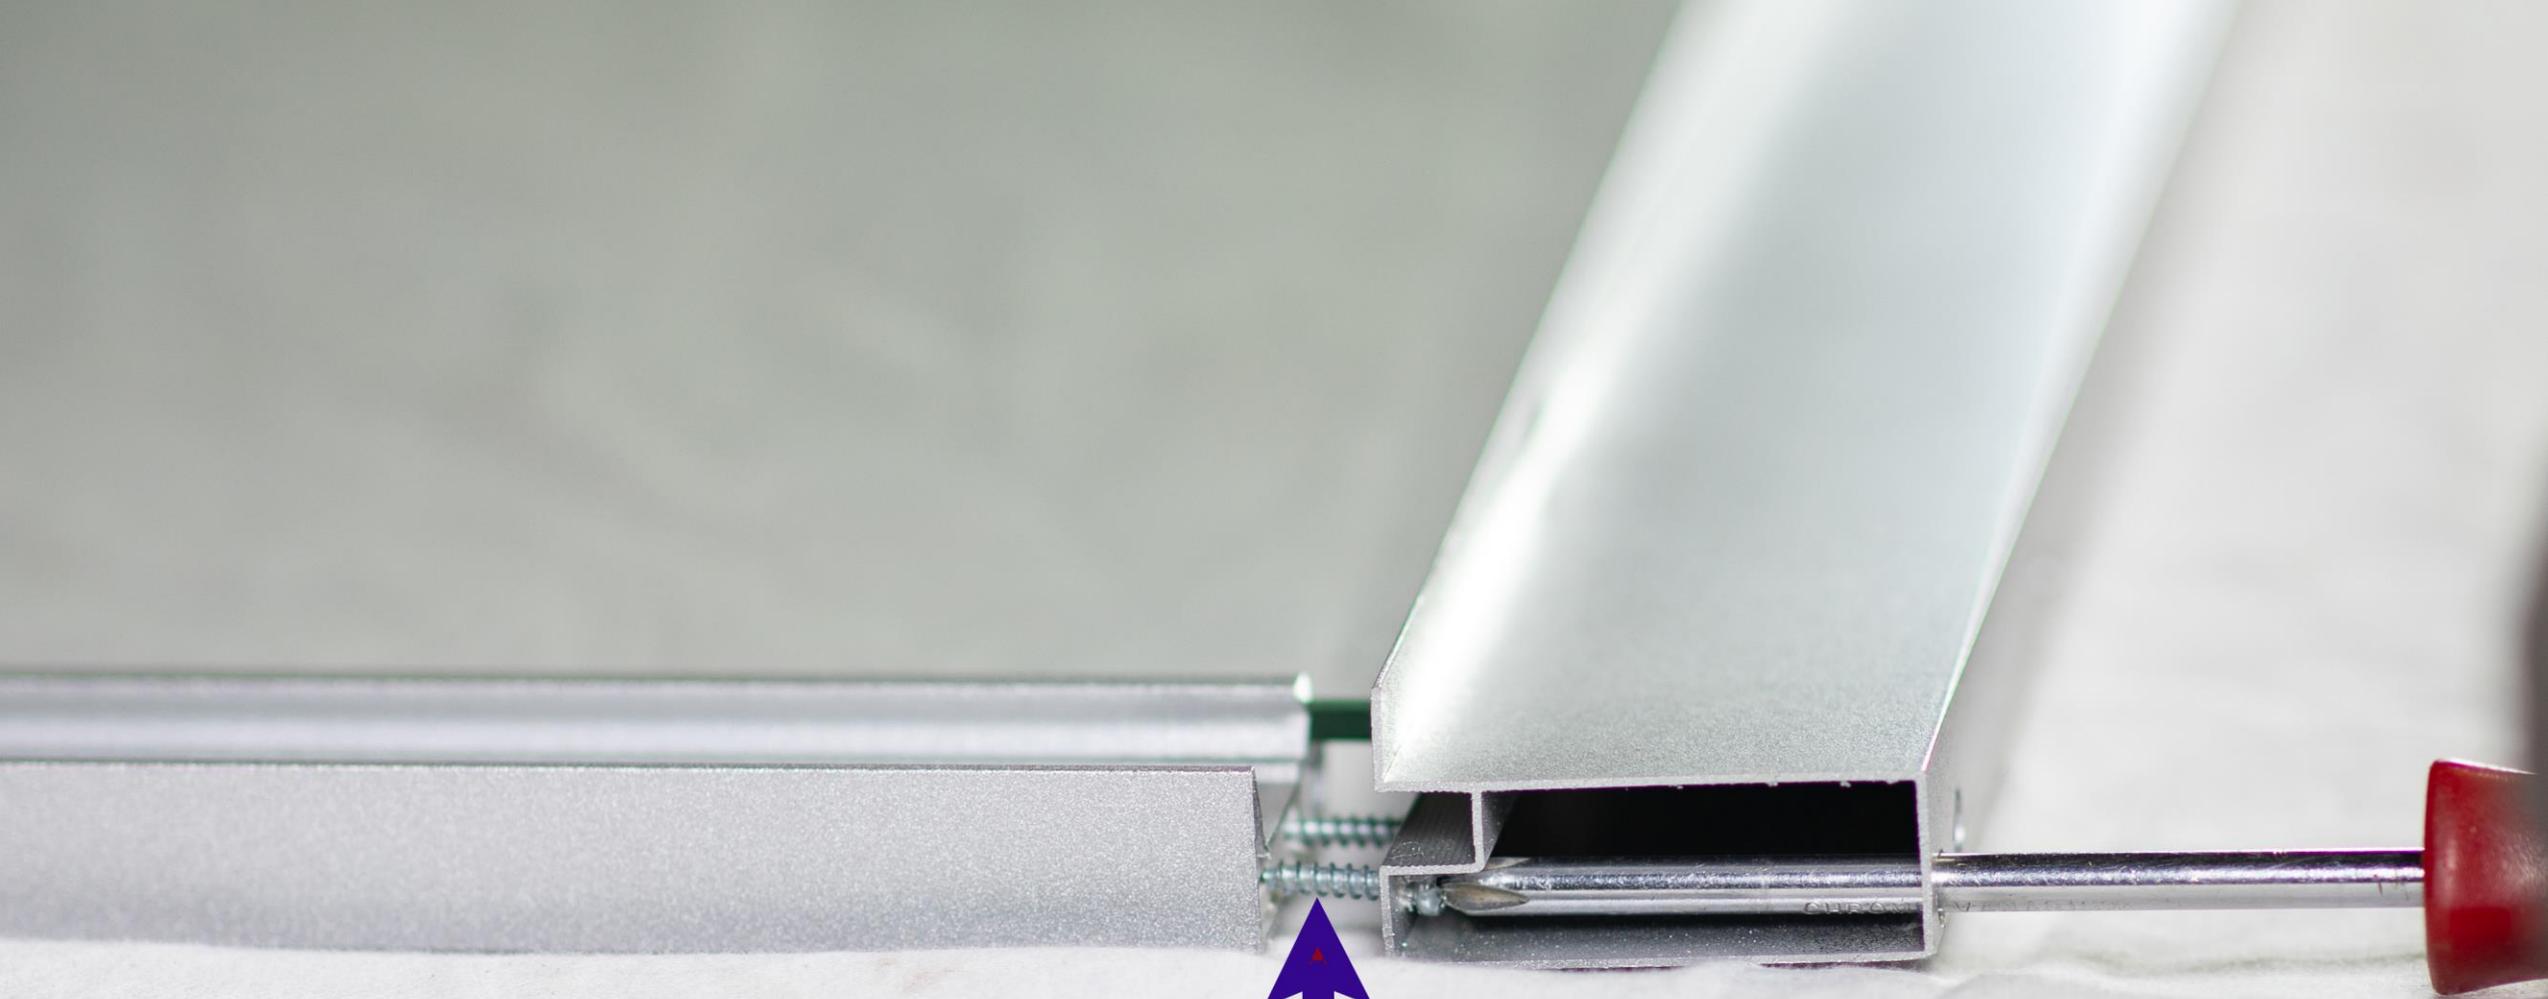


Secure the 2nd screw




*Use power screw driver to
tighten screws alternatively*

Top track and stile are attached

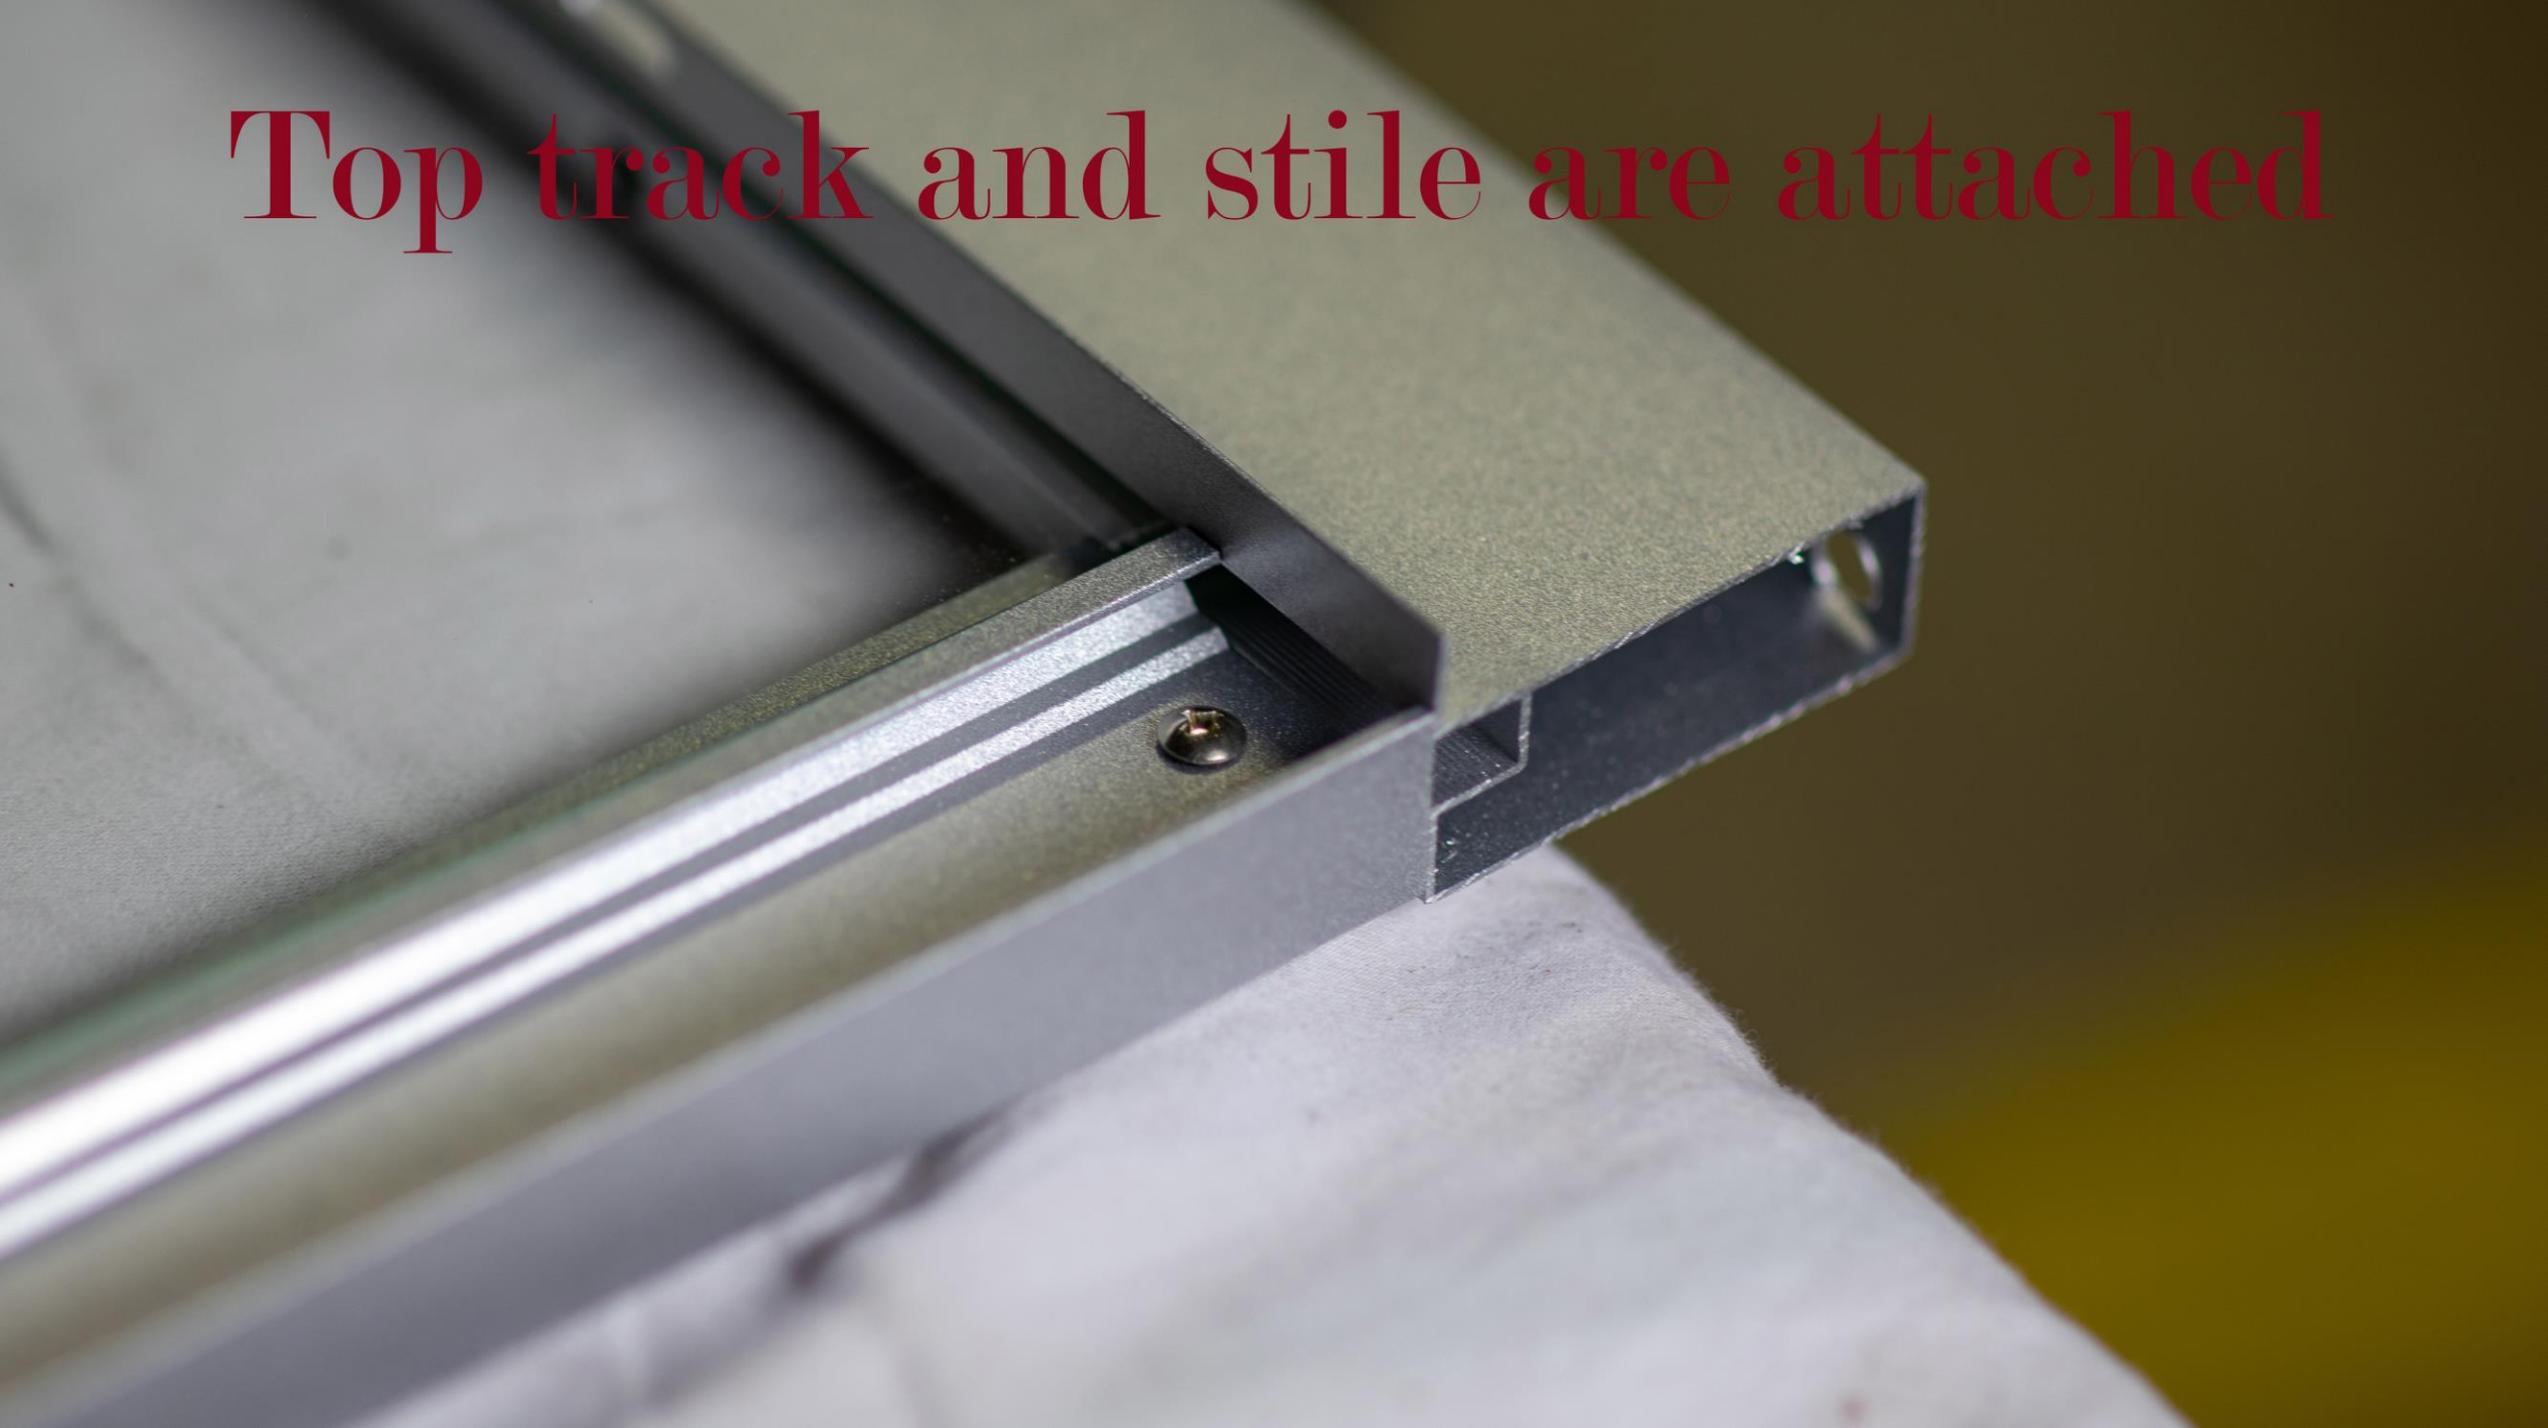

Install the clip



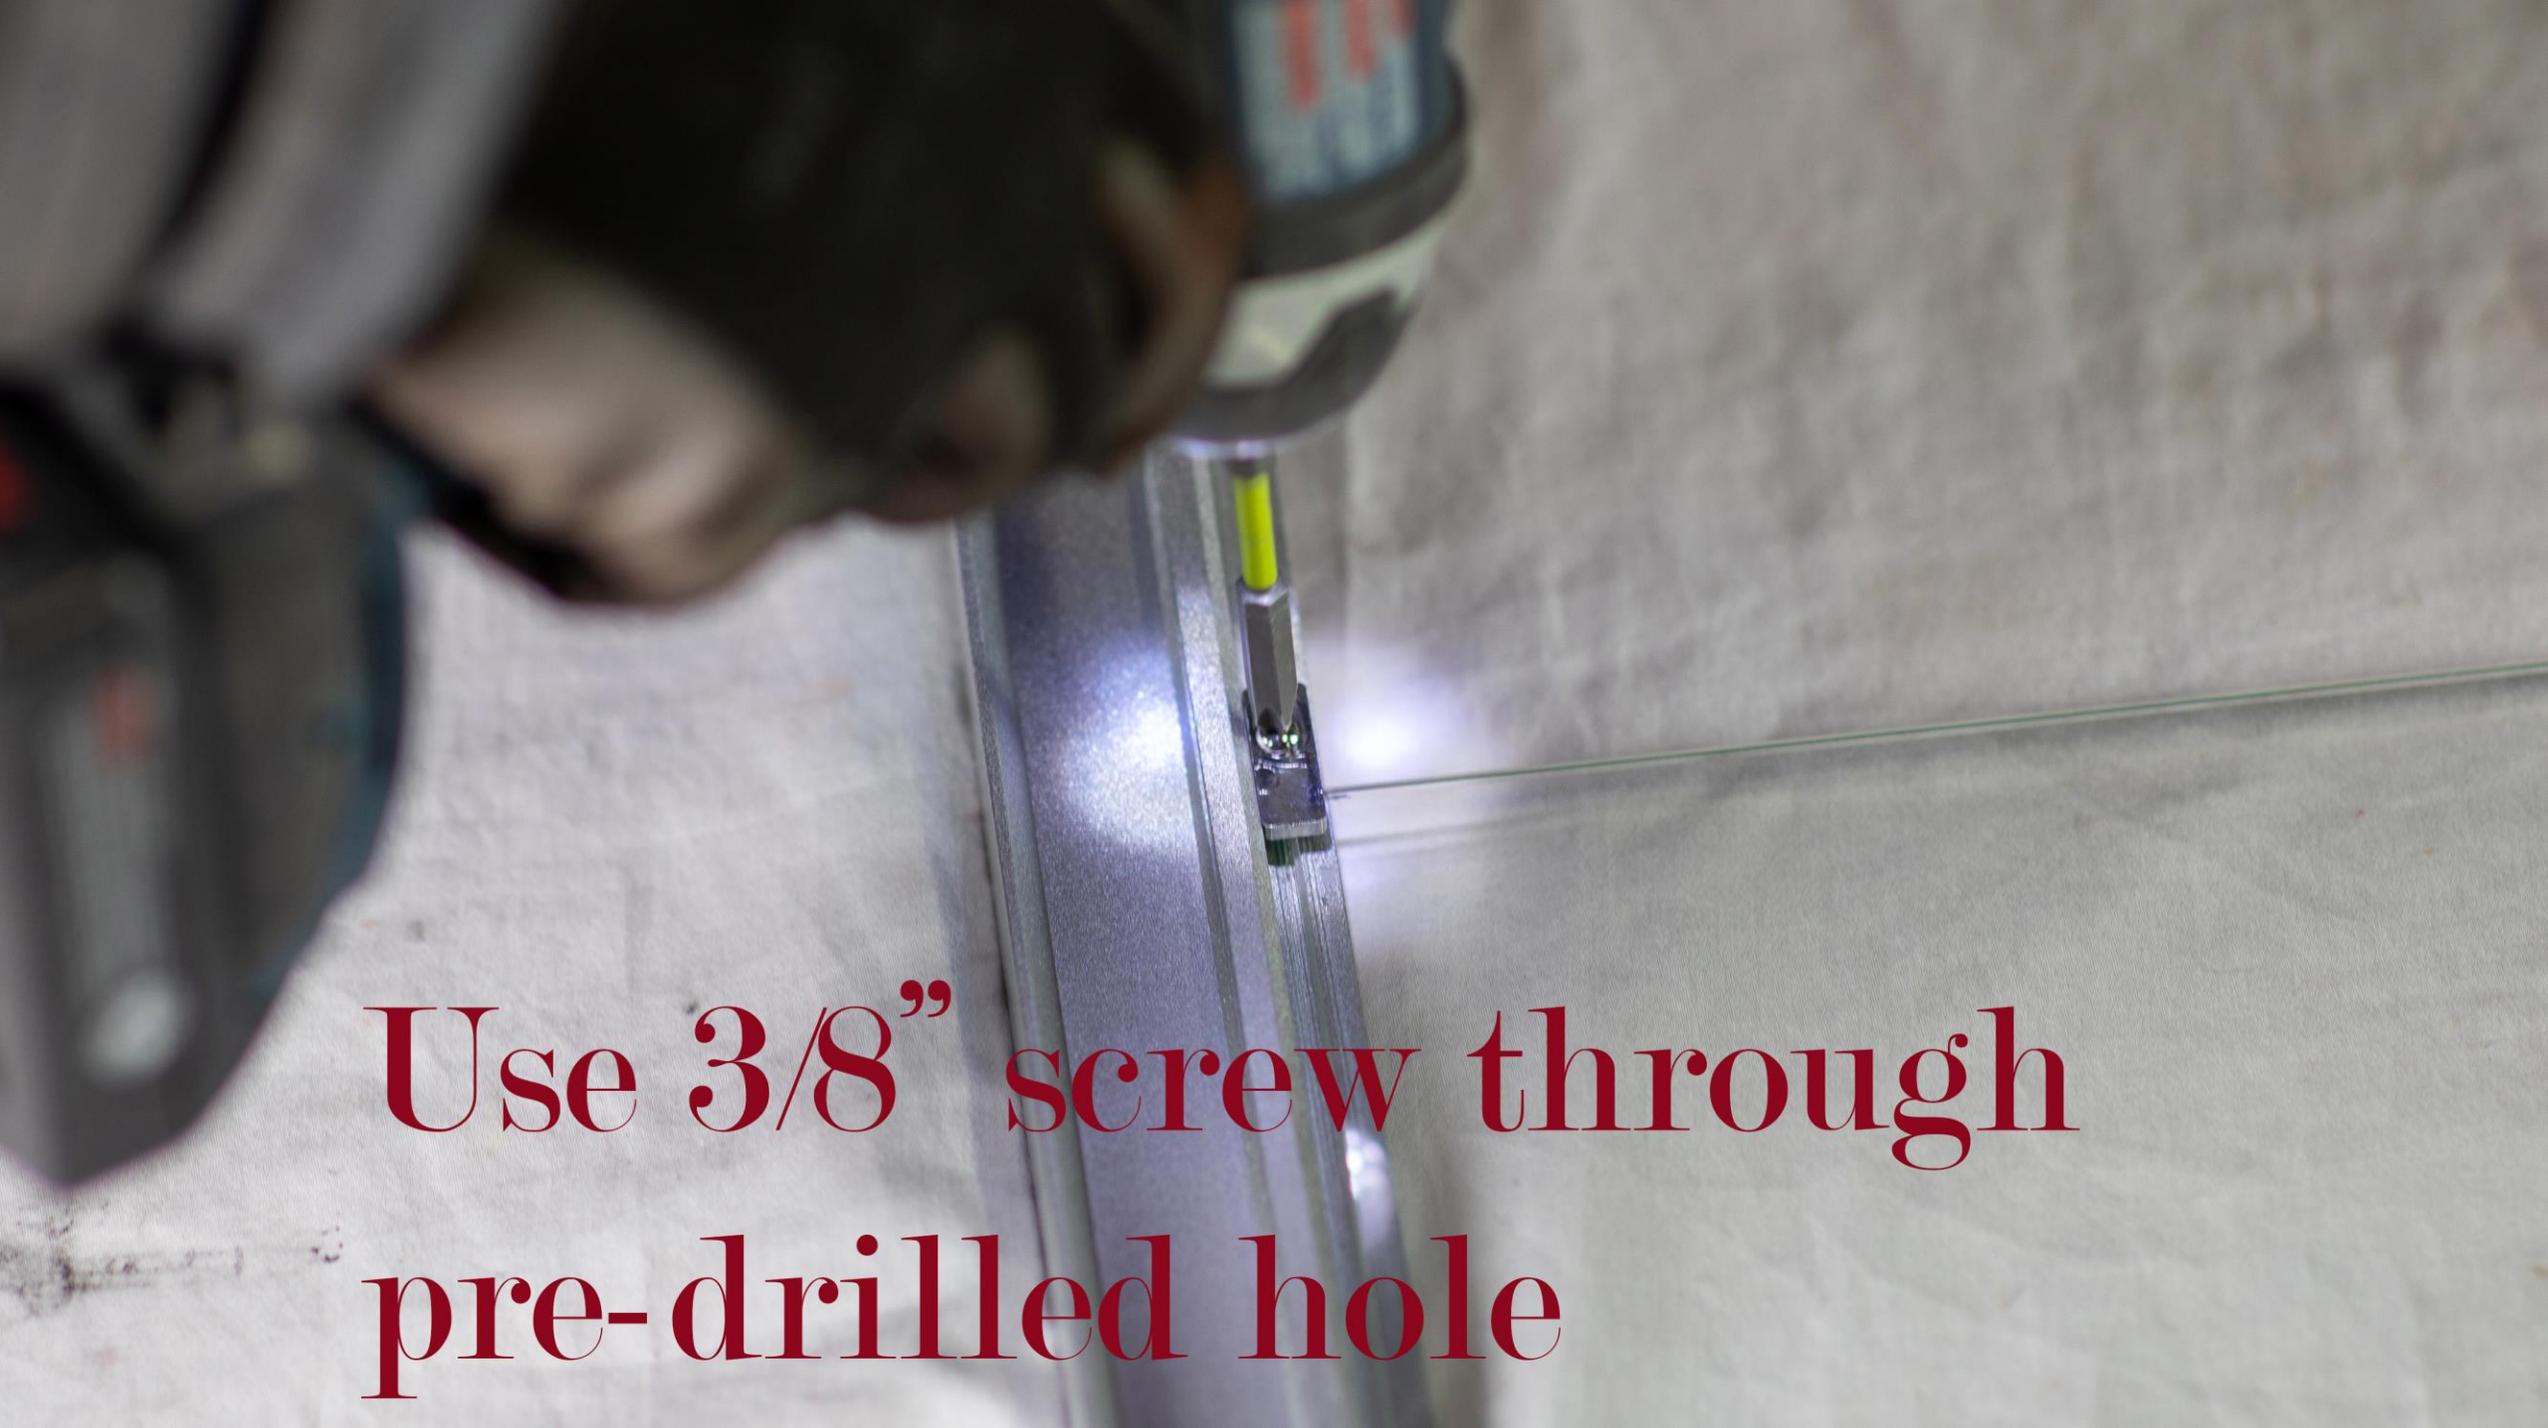


Use 3/8" screw through
pre-drilled hole

Stand up the installed panel on a box so that the 2nd panel can stay flat on worktable

Installed Panel

2nd panel to install

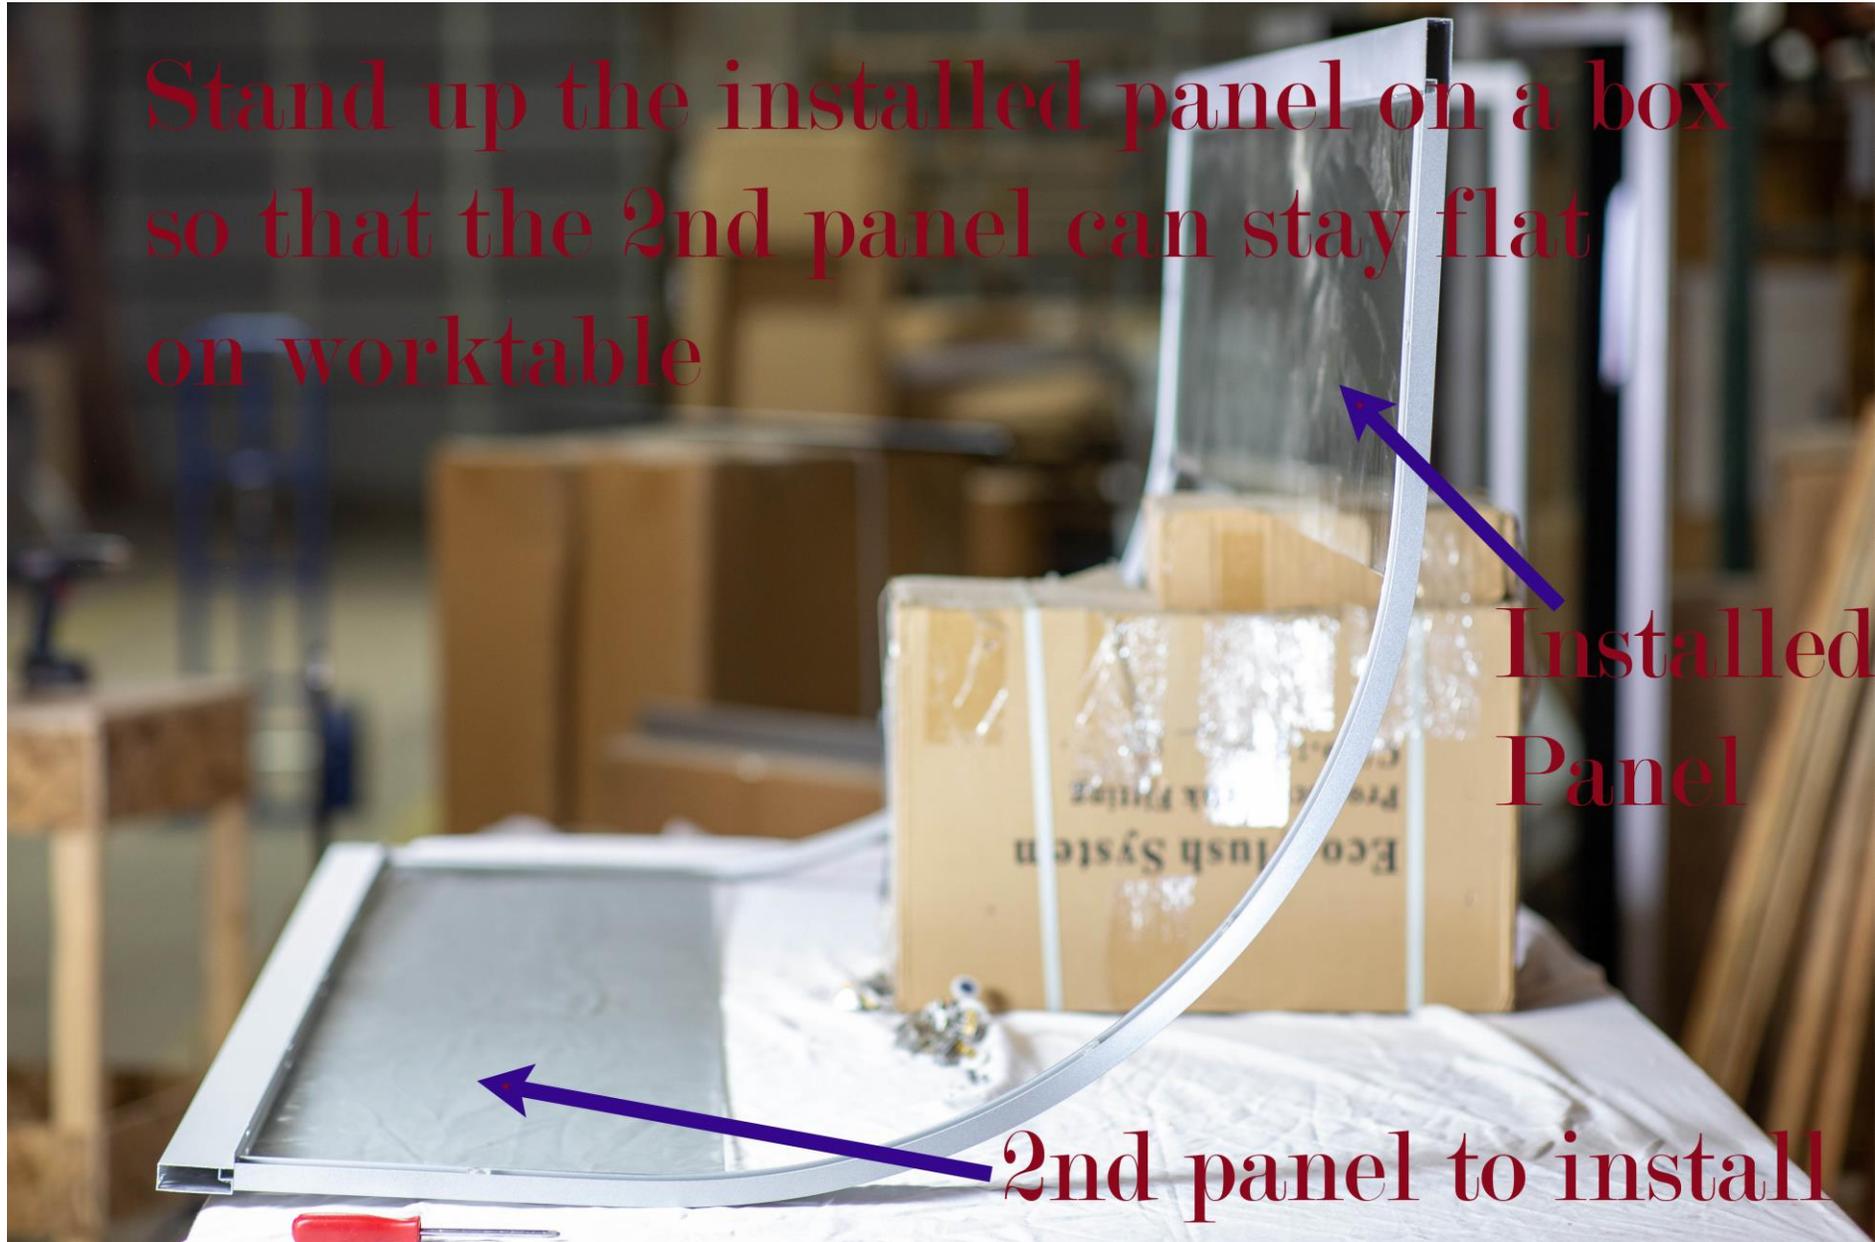

Going through same procedure
for the 2nd panel

